

390 Duke

Art. no. 3213416en



DEAR KTM CUSTOMER

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy your new vehicle!

Enter the serial numbers of your vehicle below.

| | |
|--------------------------|----------------|
| Chassis number (☛ p. 20) | Dealer's stamp |
| Engine number (☛ p. 21) | |
| Key number (☛ p. 21) | |

The Owner's Manual contained the latest information for this model series at the time of going to print. Minor differences due to developments in design cannot be ruled out completely.

All specifications are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from illustrations and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015 KTM Sportmotorcycle GmbH, Mattighofen Austria
All rights reserved



3213416en

11/2015

DEAR KTM CUSTOMER

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

REG.NO. 12 100 6061

TABLE OF CONTENTS

| | | | | | |
|---|---|----|---------------------------|---------------|----|
| 1 | MEANS OF REPRESENTATION | 7 | 6 | CONTROLS..... | 22 |
| | 1.1 Symbols used | 7 | 6.1 Clutch lever | 22 | |
| | 1.2 Formats used..... | 8 | 6.2 Hand brake lever..... | 22 | |
| 2 | SAFETY ADVICE..... | 9 | 6.3 Throttle grip | 23 | |
| | 2.1 Use definition..... | 9 | 6.4 Horn button..... | 23 | |
| | 2.2 Safety advice..... | 9 | | | |
| | 2.3 Degrees of risk and symbols | 10 | | | |
| | 2.4 Tampering warning..... | 10 | | | |
| | 2.5 Safe operation | 11 | | | |
| | 2.6 Protective clothing | 12 | | | |
| | 2.7 Work rules | 12 | | | |
| | 2.8 Environment..... | 12 | | | |
| | 2.9 Owner's Manual | 13 | | | |
| 3 | IMPORTANT NOTES..... | 14 | | | |
| | 3.1 Manufacturer and implied warranty..... | 14 | | | |
| | 3.2 Operating and auxiliary substances | 14 | | | |
| | 3.3 Spare parts, accessories | 14 | | | |
| | 3.4 Service | 15 | | | |
| | 3.5 Figures | 15 | | | |
| | 3.6 Customer service..... | 15 | | | |
| 4 | VIEW OF VEHICLE | 16 | | | |
| | 4.1 View of vehicle, front left (example) | 16 | | | |
| | 4.2 View of vehicle, rear right (example) | 18 | | | |
| 5 | SERIAL NUMBERS | 20 | | | |
| | 5.1 Chassis number | 20 | | | |
| | 5.2 Type label | 20 | | | |
| | 5.3 Engine number | 21 | | | |
| | 5.4 Key number..... | 21 | | | |

TABLE OF CONTENTS

| | | | | | |
|-------|---|-----|------|--|-----|
| 11.13 | Checking the chain, rear sprocket, and engine sprocket..... | 87 | 14.5 | Changing the fuses of individual power consumers..... | 120 |
| 11.14 | Removing the front spoiler | 91 | 14.6 | Changing the headlight bulb | 122 |
| 11.15 | Fitting front spoiler | 92 | 14.7 | Changing the parking light bulb..... | 125 |
| 12 | BRAKE SYSTEM | 93 | 14.8 | Checking the headlight setting | 129 |
| 12.1 | Antilock Braking System (ABS) | 93 | 14.9 | Adjusting the headlight range..... | 130 |
| 12.2 | Checking the brake discs | 94 | 15 | COOLING SYSTEM | 133 |
| 12.3 | Checking the brake fluid level of the front brake ... | 95 | 15.1 | Cooling system | 133 |
| 12.4 | Adding front brake fluid  | 96 | 15.2 | Checking the antifreeze and coolant level..... | 134 |
| 12.5 | Checking the front brake linings | 97 | 15.3 | Checking the coolant level | 136 |
| 12.6 | Checking the free travel of foot brake lever | 98 | 15.4 | Draining the coolant  | 138 |
| 12.7 | Adjusting the free travel of the foot brake lever  | 99 | 15.5 | Filling/bleeding the cooling system  | 139 |
| 12.8 | Checking the rear brake fluid level..... | 100 | 16 | TUNING THE ENGINE..... | 141 |
| 12.9 | Adding rear brake fluid  | 101 | 16.1 | Checking the play in the throttle cable | 141 |
| 12.10 | Checking the rear brake linings | 103 | 16.2 | Adjusting the play in the throttle cable  | 142 |
| 13 | WHEELS, TIRES | 104 | 16.3 | Checking the clutch lever play..... | 142 |
| 13.1 | Removing the front wheel  | 104 | 16.4 | Adjusting the clutch cable play  | 143 |
| 13.2 | Installing the front wheel  | 105 | 17 | SERVICE WORK ON THE ENGINE | 144 |
| 13.3 | Removing the rear wheel  | 107 | 17.1 | Checking the engine oil level..... | 144 |
| 13.4 | Installing the rear wheel  | 108 | 17.2 | Changing the engine oil and oil filter, cleaning the oil screens  | 144 |
| 13.5 | Checking the rear hub rubber dampers  | 109 | 17.3 | Adding engine oil..... | 147 |
| 13.6 | Checking the tire condition | 111 | 18 | CLEANING, CARE | 149 |
| 13.7 | Checking the tire air pressure..... | 112 | 18.1 | Cleaning the motorcycle | 149 |
| 14 | ELECTRICAL SYSTEM | 114 | 18.2 | Checks and maintenance steps for winter operation..... | 151 |
| 14.1 | Removing the battery  | 114 | 19 | STORAGE | 153 |
| 14.2 | Installing the battery  | 115 | 19.1 | Storage | 153 |
| 14.3 | Recharging the battery  | 116 | 19.2 | Preparing for use after storage..... | 154 |
| 14.4 | Changing the ABS fuses | 119 | 20 | TROUBLESHOOTING | 155 |

TABLE OF CONTENTS

| | | |
|--------|---------------------------------|-----|
| 21 | TECHNICAL DATA..... | 158 |
| 21.1 | Engine..... | 158 |
| 21.2 | Engine tightening torques..... | 159 |
| 21.3 | Capacities..... | 162 |
| 21.3.1 | Engine oil..... | 162 |
| 21.3.2 | Coolant..... | 162 |
| 21.3.3 | Fuel..... | 162 |
| 21.4 | Chassis..... | 163 |
| 21.5 | Electrical system..... | 164 |
| 21.6 | Tires..... | 165 |
| 21.7 | Fork..... | 165 |
| 21.8 | Shock absorber..... | 165 |
| 21.9 | Chassis tightening torques..... | 166 |
| 22 | SUBSTANCES..... | 171 |
| 23 | AUXILIARY SUBSTANCES..... | 174 |
| 24 | STANDARDS..... | 176 |
| | INDEX..... | 177 |

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop. There, your motorcycle will be optimally cared for by specially trained experts using the specialist tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.

1 MEANS OF REPRESENTATION

1.2 Formats used

The typographical formats used in this document are explained below.

| | |
|--------------------------------|---|
| Specific name | Identifies a proprietary name. |
| Name® | Identifies a protected name. |
| Brand™ | Identifies a brand available on the open market. |
| <u>Underlined terms</u> | Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary. |

2.1 Use definition

KTM sport motorcycles are designed and constructed to meet the normal demands of regular road operation but not for use on race courses or offroad.



Info

The motorcycle is authorized for public road traffic in the homologous version only.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencer, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

2.5 Safe operation



Danger

Danger of accidents Danger arising from the rider's judgement being impaired.

- Do not operate the vehicle while under the influence of alcohol, drugs and certain medications or physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch hot components such as exhaust system, radiator, engine, shock absorber, and the brake system. Allow these components to cool down before starting work on them.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.6 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear protective clothing (helmet, boots, gloves, pants and jacket with protectors) every time you ride the vehicle. Always wear protective clothing that is in good condition and meets the legal requirements.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.7 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

2.8 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others. When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.9 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and maintain your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle and should be handed over to the new owner if the vehicle is sold.

3.1 Manufacturer and implied warranty

The work specified in the service schedule may only be performed in an authorized KTM workshop and must be recorded in both the Service & Warranty Booklet and in **KTM Dealer.net**, otherwise any warranty coverage will become void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty. Additional information on the manufacturer or implied warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.
International KTM Website: <http://www.ktm.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the engine and chassis can lead to damage and breakage of components.

Use of the vehicle under difficult conditions, such in rain, high heat or with a heavy load, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service


Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

4 VIEW OF VEHICLE

4.1 View of vehicle, front left (example)

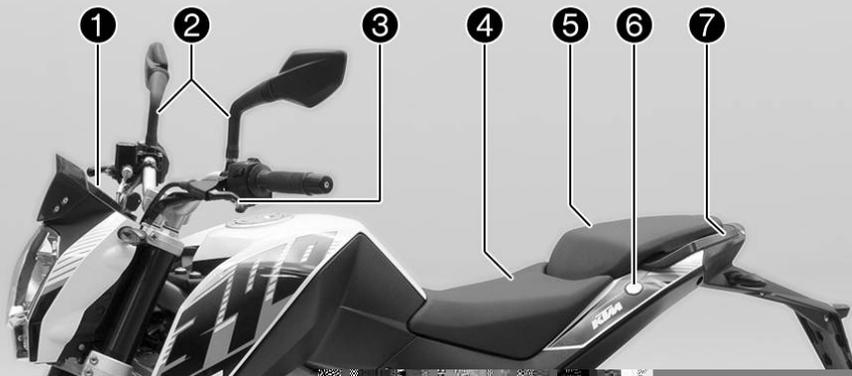

4 VIEW OF VEHICLE

| | |
|----|-------------------------|
| 1 | Combination instrument |
| 2 | Rear mirror |
| 3 | Clutch lever (☛ p. 22) |
| 4 | Seat |
| 5 | Passenger seat |
| 6 | Seat lock (☛ p. 51) |
| 7 | Grab handles (☛ p. 52) |
| 8 | Engine number (☛ p. 21) |
| 9 | Side stand (☛ p. 55) |
| 10 | Shift lever (☛ p. 53) |

4 VIEW OF VEHICLE


4.2 View of vehicle, rear right (example)



4 VIEW OF VEHICLE


| | |
|----|------------------------------------|
| 1 | Tool set (☛ p. 52) |
| 2 | Light switch (☛ p. 24) |
| 2 | High beam flasher button (☛ p. 24) |
| 2 | Turn signal switch (☛ p. 25) |
| 2 | Horn button (☛ p. 23) |
| 3 | Ignition/steering lock (☛ p. 26) |
| 4 | Emergency OFF switch (☛ p. 25) |
| 5 | Throttle grip (☛ p. 23) |
| 6 | Hand brake lever (☛ p. 22) |
| 7 | Electric starter button (☛ p. 26) |
| 8 | Chassis number (☛ p. 20) |
| 8 | Type label (☛ p. 20) |
| 9 | Passenger footrests (☛ p. 53) |
| 10 | Foot brake lever (☛ p. 54) |

5.1 Chassis number

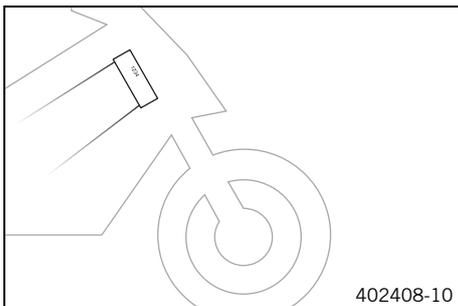

The chassis number ❶ is stamped on the right side of the steering head.


5.2 Type label

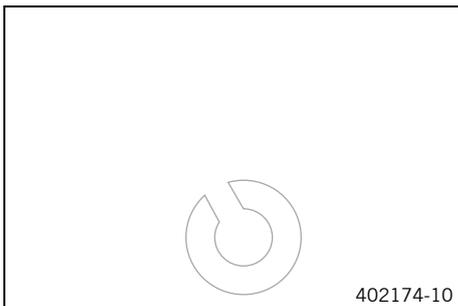

The type label ❶ is on the right of the frame behind the steering head.

5.3 Engine number

The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

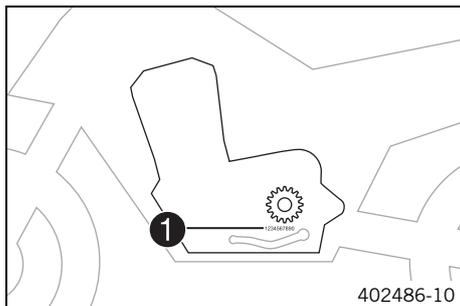


5.4 Key number

The key number ❶ can be found on the **KEYCODECARD**.




Info

You need the key number to order a spare key. Keep the **KEYCODECARD** in a safe place.

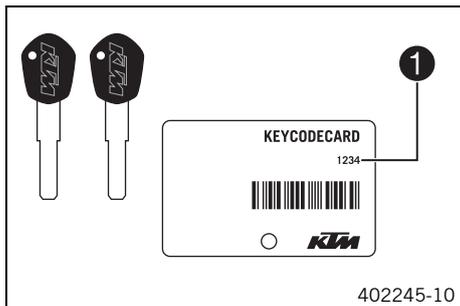


6 CONTROLS

6.1 Clutch lever

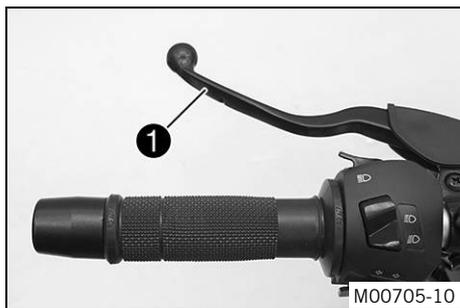

6.3 Throttle grip

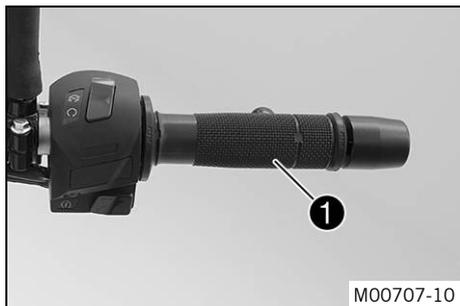

The throttle grip ❶ is fitted on the right side of the handlebar.

6.4 Horn button



The horn button ❶ is fitted on the left side of the handlebar.

Possible states

- Horn button  in neutral position
- Horn button  pressed – The horn is operated in this position.

6.5 Light switch



The light switch ❶ is fitted on the left side of the handlebar.

Possible states

| | |
|---|--|
|  | Low beam on – The light switch is turned downward. In this position, the low beam and the tail light are switched on. |
|  | High beam on – The light switch is turned upwards. In this position, the high beam and the tail light are switched on. |

6.6 High beam flasher button



The high beam flasher button ❶ is fitted on the left side of the handlebar.

Possible states

- High beam flasher button in neutral position
- High beam flasher button pressed – In this position, the headlight flasher (high beam) is actuated.

6.7 Turn signal switch



M00706-11


The turn signal switch ❶ is fitted on the left side of the handlebar.

Possible states

| | |
|---|---|
| | Turn signal off |
|  | Turn signal, left, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use. |
|  | Turn signal, right, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use. |

To switch off the turn signal, press the turn signal switch towards the switch case.

6.8 Emergency OFF switch

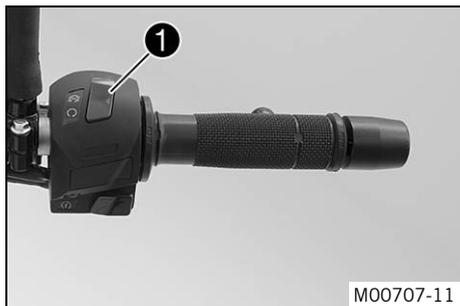


M00707-11

The emergency OFF switch ❶ is fitted on the right side of the handlebar.

Possible states

| | |
|---|---|
|  | Emergency OFF switch off – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine cannot be started. |
|  | Emergency OFF switch on – This position is required for operation; the ignition circuit is closed. |

6.9 Electric starter button

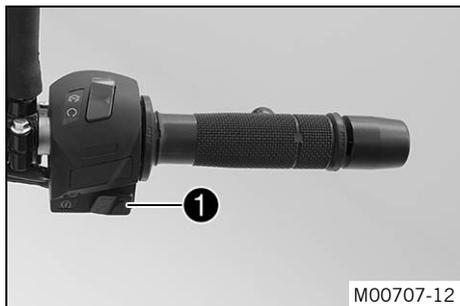


The electric starter button ❶ is fitted on the right side of the handlebar.

Possible states

- Electric starter button ❸ in basic position
- Electric starter button ❸ pressed – In this position, the electric starter is actuated.

6.10 Ignition/steering lock

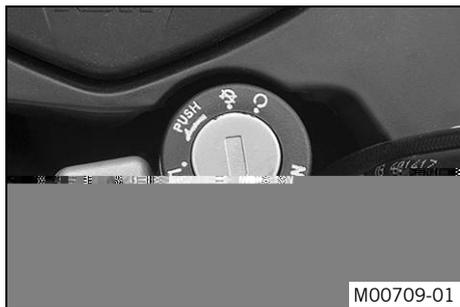

The ignition/steering lock is in front of the upper triple clamp.

Possible states


| | |
|--------------------|---|
| | <p>Ignition OFF – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start. The ignition key can be removed.</p> |
| | <p>Ignition ON – In this position, the ignition circuit is closed and the engine can be started.</p> |
| <p>LOCK</p> | <p>Steering locked – In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.</p> |

6.11 Locking the steering

Note


Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

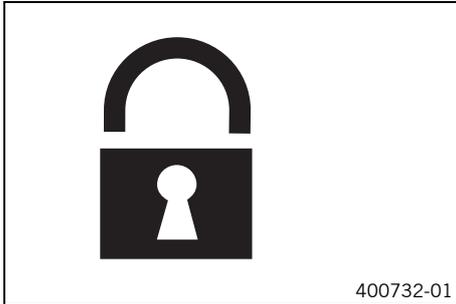

- Park the vehicle.
- Turn the handlebar all the way to the left.
- Insert the key into the ignition/handlebar lock, press in, and turn to the left. Remove the key.
- ✓ Steering is no longer possible.


6.12 Unlocking the steering

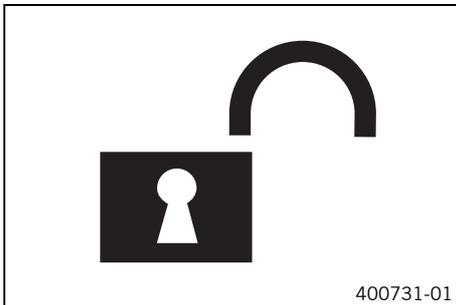

- Insert the key into the ignition/handlebar lock, press in, and turn to the right. Remove the key.
- ✓ You can now steer the bike again.

6.13 Combination instrument

6.13.1 Overview

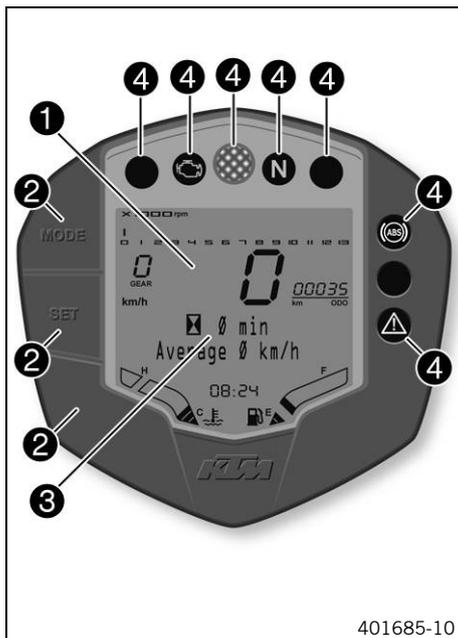

401685-10

- | | |
|---|----------------------------|
| 1 | Display (☛ p. 35) |
| 2 | Function buttons (☛ p. 33) |
| 3 | Info display (☛ p. 39) |
| 4 | Indicator lamps (☛ p. 34) |

6.13.2 Activation and test



401686-01

Activation

The combination instrument is activated when the ignition is switched on.

Test

The segments of the tachometer and the gear display light up and switch off in sequence.

The speed display counts from 0 to 199 and back.


The remaining display segments outside the info display light up briefly.

The **READY TO RACE >>** logo appears on the info display.


The display then changes to the last selected mode.

6.13.3 Warning notes

Low Oil Pressure appears on the info display if the oil pressure is too low.

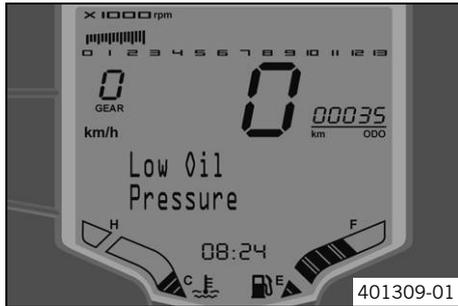


Low Fuel Level appears on the info display if the fuel level reaches the reserve mark.

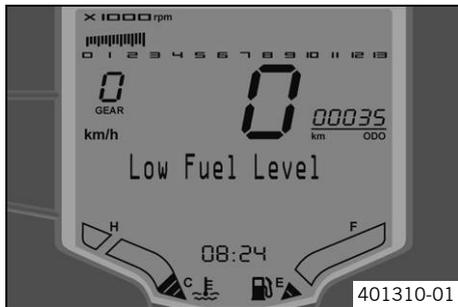


6 CONTROLS

High Coolant Temperature appears on the info display if the coolant temperature rises above the specified value.

| | |
|---------------------|-----------------|
| Coolant temperature | 125 °C (257 °F) |
|---------------------|-----------------|

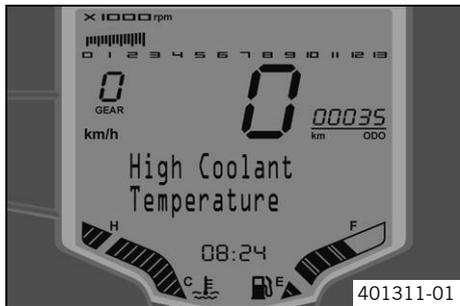


Side Stand Down appears on the info display if the side stand is folded down.

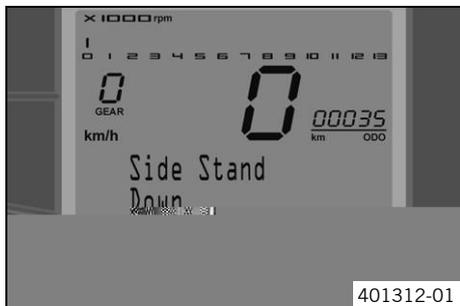


Low Battery appears on the info display if the battery voltage falls below the specified value.

| | |
|-----------------|---------|
| Battery voltage | 10.80 V |
|-----------------|---------|

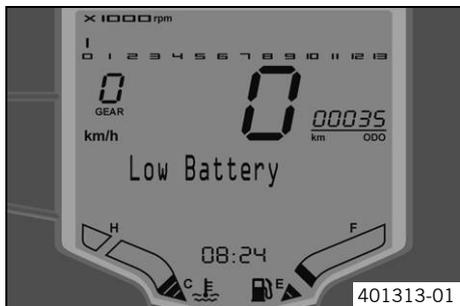

6 CONTROLS

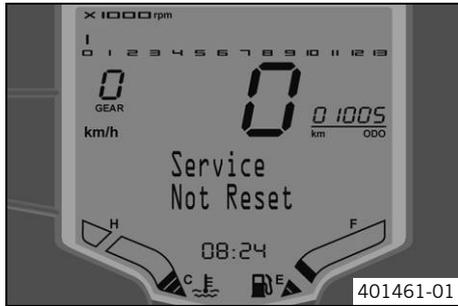

Service Not Reset appears on the info display for 10 seconds when the ignition is switched on and the distance interval between service appointments has been exceeded or the service interval display was not reset during a service appointment.

6.13.4 Function buttons



You can change the display mode with the **MODE** button ①.

Possible display modes are total distance traveled (**TRIP 1**), distance 1 (**ODO**) and distance 2 (**TRIP 2**).

Pressing and holding the **SET** button ② resets the distance 1 (**TRIP 1**) and distance 2 (**TRIP 2**) functions to **0.0** and briefly pressing the **SET** button ② changes the info display to the next display mode.

The ABS can be switched off with the button ③.

6.13.5 Indicator lamps




401686-01

Possible states

| | |
|--|---|
| | The turn signal indicator light flashes green simultaneously with the turn signal – The turn signal is switched on. |
| | The engine diagnosis warning lamp (MIL) lights up red – The OBD (on-board diagnosis) has detected an emission- or safety-critical error. |
| | The shift warning lights up/flashes red – The set shift speed has been reached. |
| | The idling speed indicator lamp lights up green – The transmission is shifted to idle. |
| | The high beam indicator lamp lights up blue – The high beam is switched on. |
| | The immobilizer indicator lamp lights up or flashes red – Status or error message for immobilizer/alarm system (optional). |
| | The general warning lamp lights up yellow – An operating safety (warning) message was detected. This is also shown in the info display. |
| | ABS warning lamp lights up/flashes yellow – Status or error messages relating to ABS (antilock brake system). |

6.13.6 Display

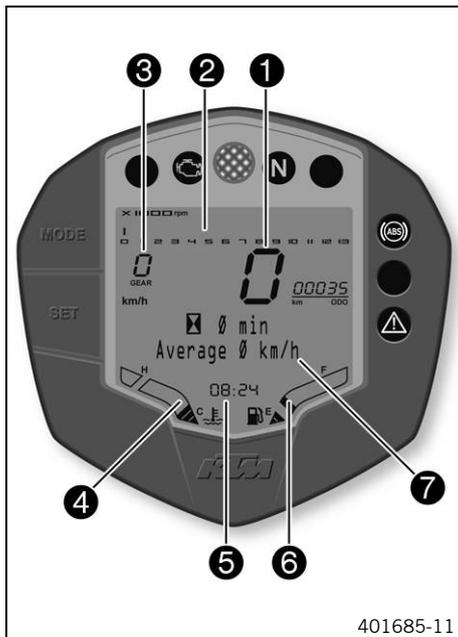

The speed **1** is shown in kilometers per hour **km/h** or in miles per hour **mph**.

The tachometer **2** shows the engine speed in revolutions per minute.

The gear display **3** shows the engaged gear.

The coolant temperature appears in segment **4**.

The time appears in segment **5**.

The filling level in the fuel tank is displaced in segment **6**.

The info display **7** shows additional information.



Info

The time must be reset after the battery was disconnected or the fuse was removed.

The intensity of the LED display depends on the ambient brightness.


6.13.7 Filling level display in fuel tank



The filling level display consists of 9 bars. The more bars are lit, the more fuel is in the fuel tank.

401292-01

6.13.8 TRIP F display

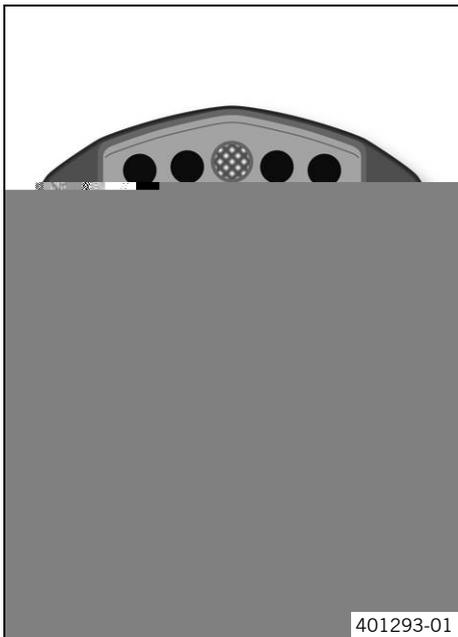

If the fuel level drops to the reserve mark, the display mode automatically changes to **TRIP F** and starts to count from **0.0**, regardless of the previous display mode.



Info

At the same time as the display mode **TRIP F**, the general warning lamp  lights up and the warning note **Low Fuel Level** appears on the info display.

6.13.9 Coolant temperature indicator



The temperature display consists of 13 bars. The more bars that light up, the hotter the coolant. When all bars light up, the following warning note appears on the info display:

High Coolant Temperature.

Possible states

- Engine cold – Up to three bars light up.
- Engine warm – Four to ten bars light up.
- Engine hot – Eleven to thirteen bars light up.


6.13.10 Info display



Various warning notes appear on info display ①.

If the general warning lamp  lights up, the corresponding warning note is shown on the info display.

6.13.11 Riding time/average speed menu

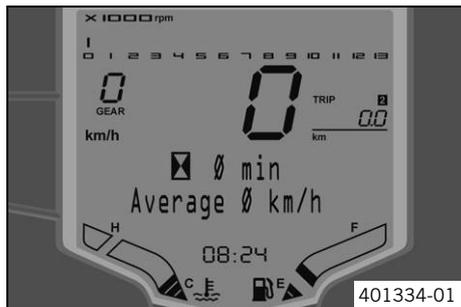

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

The riding time and average speed are displayed in this menu.




Info

If the ignition was switched off for over 60 minutes, the display is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

6.13.12 Average speed/average fuel consumption 1 menu

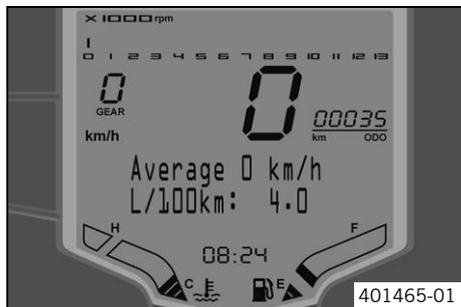

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

In this menu, the average speed and the average fuel consumption 1 are displayed in L/100 km (or L/100 miles).

i Info
 The average fuel consumption 1 is displayed after several 100 meters of travel after the ignition is switched on.
 If the ignition was switched off for over 60 minutes, the display of the average speed and average fuel consumption 1 is reset to 0.

| | |
|--------------------------------------|---------------------------------------|
| Press the SET button briefly. | Next display mode on the info display |
|--------------------------------------|---------------------------------------|

6.13.13 Average fuel consumption 1/average fuel consumption 2 menu



- Condition**
- Alternative 1**
- The ignition is on.
 - The motorcycle is stationary.
- Alternative 2**
- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

In this menu, the average fuel consumption 1 in L/100 km (or L/100 miles) and the average fuel consumption 2 in km/L (or miles/L) are displayed.

i Info
 The average fuel consumptions 1 and 2 are displayed after several 100 meters of travel after the ignition is switched on.
 If the ignition was switched off for over 60 minutes, the display of the average fuel consumption 1 and 2 is reset to 0.

| | |
|--------------------------------------|---------------------------------------|
| Press the SET button briefly. | Next display mode on the info display |
|--------------------------------------|---------------------------------------|

6.13.14 Average fuel consumption 2/service menu



Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

The average fuel consumption 2 in km/L (or miles/L) and the distance to the next service are displayed in this menu.



Info

The average fuel consumption 2 is displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the average fuel consumption 2 is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

6.13.15 Service/range menu



Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

This menu shows the distance to the next service and the range.



Info

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.

The range is displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the range and riding time is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

6.13.16 Range/riding time menu



Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

The range and the riding time are displayed in this menu.



Info

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.

The range is displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the range and riding time is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

6.13.17 Total distance menu ODO



Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.

ODO shows the total distance covered.



Info

This value is retained, even if the battery is disconnected from the vehicle and/or the fuse blows.

Press the **MODE** button.

Next display mode on the display

| | |
|---|-----------------------------------|
| Press the SET button for 5 - 10 seconds. | Display of TRIP 2 is reset |
| Press the MODE button. | Next display mode on the display |

6.13.20 Setting kilometers or miles



Info

Make the country-specific setting.

Condition

The ignition is on.
The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.
- Press the **MODE** button for 5 - 10 seconds.
- ✓ The display changes from **km/h** to **mph** or from **mph** to **km/h**.



6.13.21 Setting the time


Condition

The ignition is on.
The motorcycle is stationary.



- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.
- Press the **MODE** and **SET** buttons for 5 - 10 seconds.
 - ✓ The time display begins to flash.
- Set the hours display using the **MODE** button.
- Set the minutes display using the **SET** button.
- Press the **MODE** and **SET** buttons for 5 - 10 seconds.
 - ✓ The time is set.

6.13.22 Adjusting the shift speed RPM 1

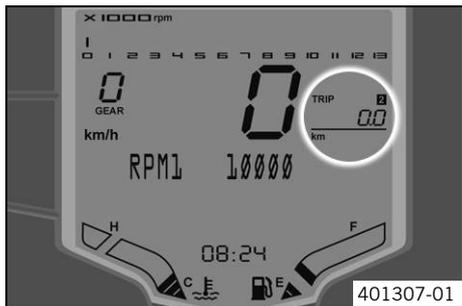

Condition

The ignition is on.
The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **MODE** button for 5 - 10 seconds.
 - ✓ The display **RPM 1** appears.

Info

The engine speed can be set at intervals of 50.
RPM 1 is the engine speed above which the shift warning light starts flashing.

- Set the speed with the **MODE** and **SET** buttons.


Info

The **MODE** button increases the value.
The **SET** button decreases the value.

- Do not activate the two buttons for approx. 15 seconds.

- ✓ The display **RPM 1** goes out and the set speed is stored.

6.13.23 Adjusting the shift speed RPM 2

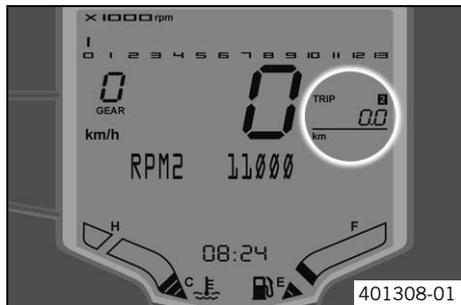

Condition

The ignition is on.

The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **SET** button for 5 - 10 seconds.
- ✓ The display **RPM 2** appears.

Info

The engine speed can be set at intervals of 50.

RPM 2 is the engine speed above which the shift warning light lights up constantly.

The speed **RPM 2** must always be higher than the speed **RPM 1**.

- Set the speed with the **MODE** and **SET** buttons.

Info

The **MODE** button increases the value.

The **SET** button decreases the value.

- Do not activate the two buttons for approx. 15 seconds.
- ✓ The display **RPM 2** goes out and the set speed is stored.

6.14 Opening the filler cap



Danger

Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- The fuel in the fuel tank expands when warm and may emerge if overfilled. Follow the instructions on refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.


- Fuel must not come into contact with the skin, eyes, or clothing. Do not breathe in the fuel vapors. If contact occurs with the eyes, rinse with water immediately and contact a physician. Immediately clean contaminated areas on the skin with soap and water. If fuel is swallowed, contact a physician immediately. Change clothing that has been contaminated with fuel. Store fuel properly in a suitable canister and keep away from children.



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

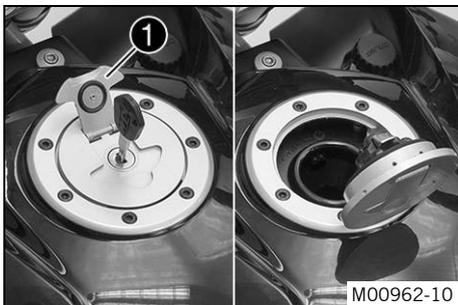

- Lift the cover **1** of the filler cap and insert the ignition key in the lock.


Note

Danger of damage Ignition key breakage.

- To take pressure off of the ignition key, push down on the filler cap. Damaged ignition keys must be replaced.
- Turn the ignition key 90° clockwise.
- Open the filler cap.

- Remove the ignition key.

6.15 Closing the filler cap

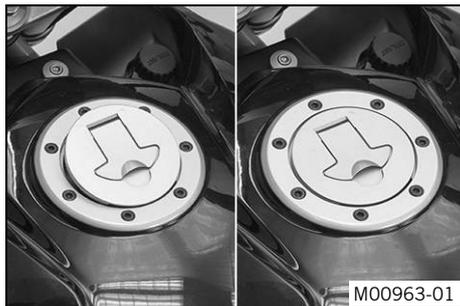


Warning

Fire hazard Fuel is highly flammable, poisonous and harmful to your health.

- After closing the filler cap, ensure that it is locked properly. Change clothing that has been contaminated with fuel. Immediately clean contaminated areas on the skin with soap and water.
-
- Close the filler cap.
 - Push down the filler cap until the lock engages.

6.16 Seat lock

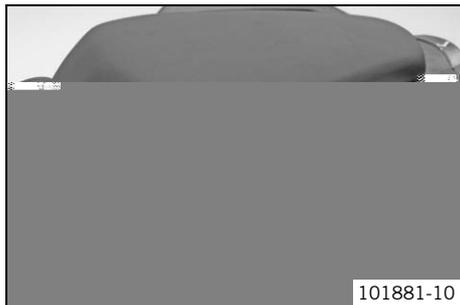


The seat lock **1** is located to the left of the seat. It can be locked with the ignition key.

6.17 Tool set




The tool set **1** is located under the passenger seat.

6.18 Grab handles

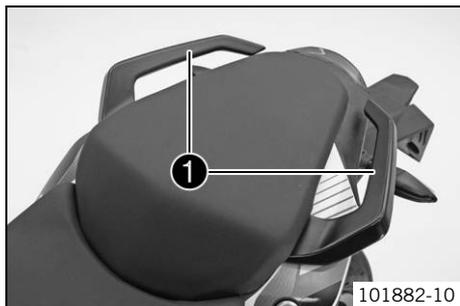

The grab handles **1** are used for moving the motorcycle around.
If you carry a passenger, the passenger can hold onto the grab handles during the trip.

6.19 Passenger footrests

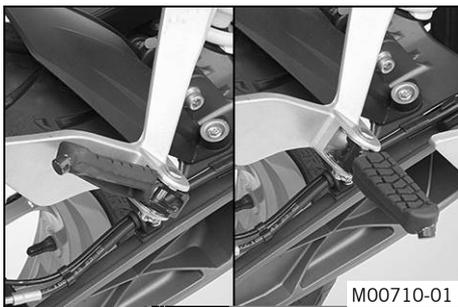


The passenger footrests can be folded in and out.

Possible states


- Passenger footrests folded up – For operation without a passenger.
- Passenger footrests folded down – For operation with a passenger.

6.20 Shift lever

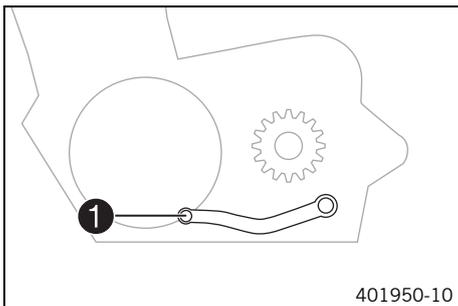


Shift lever ❶ is mounted on the left side of the engine.

6 CONTROLS

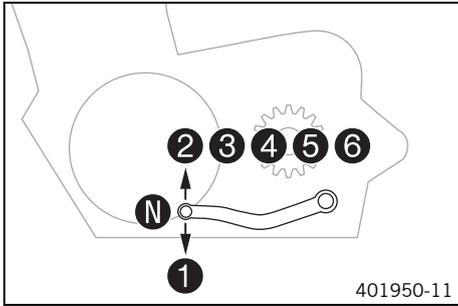


The gear positions can be seen in the photograph.
The neutral or idle position is between the first and second gears.

6.21 Foot brake lever

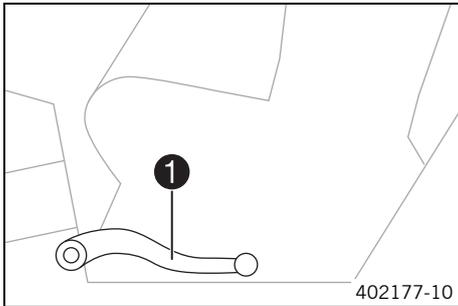

Foot brake lever 1 is located in front of the right footrest.
The foot brake lever is used to activate the rear brake.

6.22 Side stand

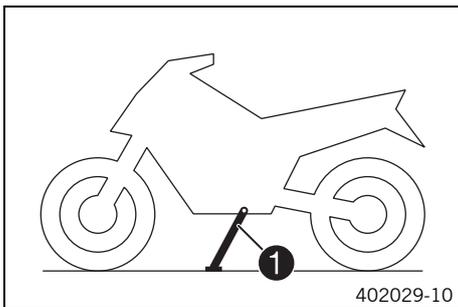

The side stand **1** is on the left side of the vehicle.
The side stand is used to park the motorcycle.



Info

The side stand must be folded up during motorcycle use.
Side stand is coupled with the safety start system; see the riding instructions.

Possible states

- Side stand folded out – The vehicle can be leaned on the side stand. The safety start system is active.
- Side stand folded in – This position is mandatory for all trips. The safety start system is inactive.

7.1 Advice on first use



Danger

Danger of accidents Danger arising from the rider's judgement being impaired.

- Do not operate the vehicle while under the influence of alcohol, drugs and certain medications or physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear protective clothing (helmet, boots, gloves, pants and jacket with protectors) every time you ride the vehicle. Always wear protective clothing that is in good condition and meets the legal requirements.



Warning

Danger of crashing Poor vehicle handling due to different tire tread patterns on front and rear wheels.

- The front and rear wheels must be fitted with tires with similar tread patterns to prevent loss of control over the vehicle.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Warning

Danger of accidents Reduced road grip with new tires.

- New tires have a smooth rolling surface and therefore cannot provide full road grip. The entire rolling surface must be roughened in the first 200 kilometers (124.3 miles) by moderate riding at alternating angles. The full grip levels are not achieved until the tires have been run in.



Info

When using your vehicle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-delivery inspection work has been carried out by an authorized KTM workshop.
 - ✓ You receive a delivery certificate and the Service and Warranty Booklet at vehicle handover.
- Before your first trip, read the entire operating instructions carefully.
- Get to know the controls.
- Get used to handling the motorcycle on a suitable piece of land before making a longer trip. Try also to ride as slowly as possible to get a better feel for the vehicle.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Run the engine in. (👉 p. 57)

7.2 Running in the engine

- During the running-in phase, do not exceed the specified engine speed.

Guideline

| | |
|-------------------------------------|-----------|
| Maximum engine speed | |
| During the first: 1,000 km (620 mi) | 7,500 rpm |



Tip

During the running-in phase, set the shift warning light to the specified engine speed.

- Adjust the shift speed **RPM 1**. (👉 p. 48)
- Adjust the shift speed **RPM 2**. (👉 p. 49)
- Avoid fully opening the throttle!

7.3 Loading the vehicle



Warning

Danger of accidents Unstable handling characteristics.

- Do not exceed the maximum permitted weight and axle loads. The overall weight consists of: motorcycle operational and with a full tank, driver and passenger with protective clothing and helmet, baggage.



Warning

Danger of accidents Unstable handling characteristics due to incorrect mounting of suitcase and/or tank rucksack.

- Mount and secure suitcase and tank rucksack according to the manufacturer's instructions.



Warning

Danger of accidents Risk of breakage of suitcase system.

- If you have fitted suitcases on your motorcycle, read the manufacturer's specifications concerning the maximum payload.



Warning

Danger of accidents Poor visibility for other road users due to slipped baggage.

- If the tail light is covered, you are less visible to traffic behind you, especially when it is dark. Check that your baggage is fixed properly at regular intervals.



Warning

Danger of accidents Changed handling characteristics and longer stopping distance with excessive payload.

- Adapt your speed according to your payload.



Warning

Danger of accidents Unstable handling characteristics due to slipped baggage.

- Check the way your baggage is fixed regularly.

7 PREPARING FOR USE

- If you carry any baggage, make sure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
- Do not exceed the overall maximum permitted weight and the axle loads.

Guideline

| | |
|-------------------------------------|------------------|
| Maximum permissible overall weight | 335 kg (739 lb.) |
| Maximum permissible front axle load | 125 kg (276 lb.) |
| Maximum permissible rear axle load | 210 kg (463 lb.) |

8.1 Checks and maintenance when preparing for use



Info

Before every trip, check the condition of the vehicle and ensure that it is roadworthy. The vehicle must be in perfect technical condition when used.

- Check the engine oil level. (☞ p. 144)
- Check the brake fluid level of the front brake. (☞ p. 95)
- Check the rear brake fluid level. (☞ p. 100)
- Check the front brake linings. (☞ p. 97)
- Check the rear brake linings. (☞ p. 103)
- Check the brake system function.
- Check the coolant level. (☞ p. 136)
- Check for chain dirt accumulation. (☞ p. 83)
- Check the chain tension. (☞ p. 84)
- Check the tire condition. (☞ p. 111)
- Check the tire air pressure. (☞ p. 112)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check the functioning of the electrical equipment.
- Check that baggage is correctly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.

8.2 Starting

 **Danger**
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

 **Caution**
Danger of accidents If the vehicle is operated with a discharged battery or without a battery, electronic components and safety equipment may be damaged.

- Never operate the vehicle with a discharged battery or without a battery.

Note


Engine failure Unfiltered intake air has a negative effect on the service life of the engine.

- Never operate the vehicle without an air filter as dust and dirt will enter the engine and lead to increased wear.

Note

Engine failure High engine speeds in cold engines have a negative effect on the service life of the engine.

- Always warm up the engine at low engine speeds.
-

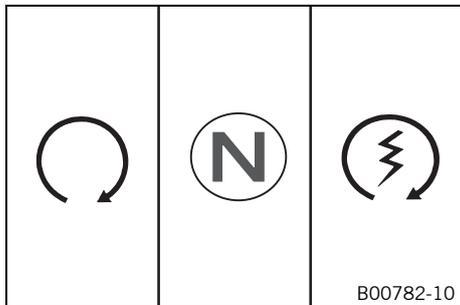

- Unlock the steering. (☛ p. 27)
- Sit on the vehicle, take the weight off of the side stand, and move up all the way.
- Turn the emergency OFF switch to the position ○.
- Switch on the ignition by turning the ignition key to the position ○.
 - ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- Shift gear to neutral.
 - ✓ The green idling speed indicator lamp **N** lights up.
 - ✓ The ABS warning lamp lights up and goes back out after starting off.
- Press the electric starter button (⚡).

i Info

Do not press the electric starter button until the combination instrument function check is finished.

When starting, **DO NOT** open the throttle. If you open the throttle during the starting procedure, fuel is not injected by the engine management system and the engine cannot start.

Press the starter for a maximum of 5 seconds. Wait for a least 5 seconds before trying again.

This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch is pulled when a gear is engaged. If the side stand is folded out and you shift into gear and release the clutch, the engine stops.



Switching off ABS

KTM recommends riding with ABS at all times. However, situations may arise in which ABS is not advantageous.

Condition

Vehicle stationary, engine running.

- Press the **1** button for 3 – 5 seconds.
- ✓ The ABS warning lamp starts flashing; ABS is deactivated.

8.3 Starting off

- Pull the clutch lever, engage 1st gear, release the clutch lever slowly, and simultaneously open the throttle carefully.

Tip

If the engine dies while starting off, only pull the clutch lever and press the electric starter button. You do not need to shift into neutral.

8.4 Shifting, riding



Warning

Danger of accidents Abrupt load alterations can cause the vehicle to get out of control.

- Avoid abrupt load alterations and sudden braking actions, and adapt your speed to the road conditions.



Warning

Danger of accidents If you change down at high engine speed, the rear wheel can lock up.

- Do not change into a low gear at high engine speed. The engine races and the rear wheel can lock up.



Warning

Danger of accidents Malfunctions caused by incorrect ignition key position.

- Do not change the ignition key position during a journey.



Warning

Danger of accidents Distraction from traffic activity by adjustments to the vehicle.

- Make all adjustments when the vehicle is at a standstill.



Warning

Risk of injury Falling off of the passenger.

- The passenger must be seated properly on the passenger seat and hold on to the front rider or the grab handles. The feet must be positioned on the passenger footrests. Note the regulations governing the minimum age of passengers.



Warning

Danger of accidents Danger of accidents caused by dangerous driving.

- Comply with traffic regulations and ride defensively and foresightedly to detect sources of danger early on.



Warning

Danger of accidents Reduced road grip with cold tires.

- On every journey, take the first miles carefully at moderate speed until the tires reach operating temperature and optimal road grip is ensured.



Warning

Danger of accidents Reduced road grip with new tires.

- New tires have a smooth rolling surface and therefore cannot provide full road grip. The entire rolling surface must be roughened in the first 200 kilometers (124.3 miles) by moderate riding at alternating angles. The full grip levels are not achieved until the tires have been run in.



Warning

Danger of accidents Unstable handling characteristics due to slipped baggage.

- Check the way your baggage is fixed regularly.



Warning

Danger of accidents Lack of roadworthiness.

- After a fall, check the vehicle as usual before preparing for use.

Note


Engine failure Overheating of engine.

- If the coolant temperature warning lamp lights up, stop and switch off the engine. Allow the engine to cool down and check the coolant level in the radiator, and top up if necessary. If you continue with the coolant temperature warning lamp alight, you may have engine failure.



Info

If you hear unusual noises while riding, stop immediately, switch off the engine and contact an authorized KTM workshop.

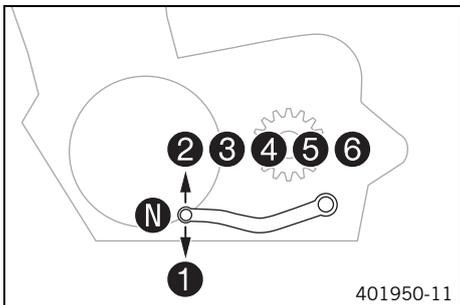

- When conditions allow (incline, road situation, etc.), you can shift into a higher gear.
- Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch and open the throttle.



Info

You can see the positions of the 6 forward gears in the figure. The neutral or idle position is between the first and second gears. First gear is used for starting off or for steep inclines.

The operating temperature is reached when 4 bars of the temperature indicator light up.

- Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
- To shift down, brake if necessary and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly and open the throttle or shift again.
- Switch off the engine if you expect to be standing for a long time.
- If the engine diagnosis warning lamp  lights up during a trip, stop immediately, switch off the engine, and contact an authorized KTM workshop.

8.5 Applying the brakes



Warning

Danger of accidents Reduced braking efficiency due to a wet or dirty brake system.

- Clean or dry a dirty or wet brake system by riding and braking gently.



Warning

Danger of accidents Reduced braking efficiency caused by spongy pressure point of front or rear brake.

- Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Failure of brake system.

- If the foot brake lever is not released, the brake linings drag continuously. The rear brake may fail due to overheating. Take your foot off the foot brake lever when you are not braking.



Warning

Danger of accidents Longer stopping distance due to higher overall weight.

- Take the longer stopping distance into account when carrying a passenger and baggage.



Warning

Danger of accidents Delayed brake action on salted roads.

- There may be salt deposits on the brake discs. In order to restore the normal braking efficiency, you will need to remove the deposits from the discs by carefully applying the brakes.
-



Warning

Danger of accidents Greater stopping distance due to ABS.

- Braking should be appropriate to the driving situation and the road conditions.



Warning

Danger of accidents Very forceful braking can cause the wheels to block.

- ABS must be switched on to be effective.
-

- When braking, release the throttle and apply the front and rear brakes at the same time.
-



Info

When the ABS is enabled, you can achieve maximum braking power even on low grip surfaces such as sandy, wet, or slippery terrain without locking of the wheels.



Warning

Danger of accidents Locking of the wheels due to braking action of the engine.

- Pull the clutch during emergency braking, full brake application and when braking on a slippery surface.



Warning

Danger of accidents Road grip is reduced when braking with the motorcycle at an angle or on a laterally inclined surface.

- Braking should be completed before you enter into a bend.
-

- Braking should always be completed before you go into a bend. Change down to a lower gear appropriate to your road speed.
- On long downhill stretches, use the braking effect of the engine. Change down one or two gears, but do not over rev the engine. In this way, you have to brake far less and the brakes do not overheat.

8.6 Stopping, parking



Warning

Risk of misappropriation Usage by unauthorized persons.

- Never leave the vehicle unattended while the engine is running. Secure the vehicle against use by unauthorized persons. If you leave the vehicle, lock the steering and remove the ignition key.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch hot components such as exhaust system, radiator, engine, shock absorber, and the brake system. Allow these components to cool down before starting work on them.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Some vehicle components become very hot when the vehicle is operated.

- Do not park the vehicle near flammable or explosive substances. Do not place objects on the vehicle while it is still warm from being run. Always let the vehicle cool first.

-
- Apply the brakes on the motorcycle.
 - Shift gear to neutral.
 - Switch off the ignition by turning the ignition key to the position .



Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on at the ignition lock, power continues to flow to most power consumers and the battery will discharge. You should therefore always switch off the engine with the ignition key – the emergency OFF switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing the side stand forward with your foot as far as it will go and lean the vehicle on it.
- Lock the steering. (☛ p. 27)

8.7 Transport

Note


Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

Note

Fire hazard Some vehicle components become very hot when the vehicle is operated.

- Do not park the vehicle near flammable or explosive substances. Do not place objects on the vehicle while it is still warm from being run. Always let the vehicle cool first.

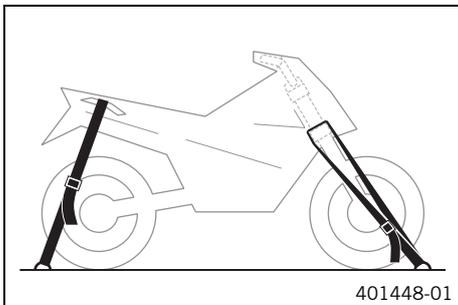

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.

8.8 Refueling



Danger

Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- The fuel in the fuel tank expands when warm and may emerge if overfilled. Follow the instructions on refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Fuel must not come into contact with the skin, eyes, or clothing. Do not breathe in the fuel vapors. If contact occurs with the eyes, rinse with water immediately and contact a physician. Immediately clean contaminated areas on the skin with soap and water. If fuel is swallowed, contact a physician immediately. Change clothing that is contaminated with fuel.

Note

Material damage Premature clogging of the fuel filter.

- In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system. (Your authorized KTM workshop will be glad to help.)

8 RIDING INSTRUCTIONS


- Only refuel with clean fuel that meets the specified standards.



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

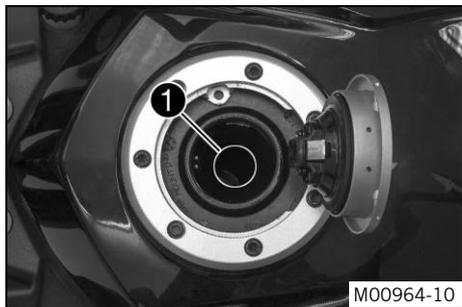

- Switch off the engine.
- Open the filler cap. (☛ p. 50)
- Fill the fuel tank with fuel up to the lower edge ❶ of the fuel filler.

| | | |
|-----------------------------------|-------------------|---|
| Total fuel tank capacity, approx. | 11 l (2.9 US gal) | Super unleaded (ROZ 95/RON 95/PON 91) (☛ p. 172) (390 Duke 2017 CO) |
| | | Super unleaded, type C (ROZ 95/RON 95/PON 91) (☛ p. 173) (390 Duke 2017 BR) |

- Close the filler cap. (☛ p. 51)

9 SERVICE SCHEDULE

9.1 Additional information

Any further work that results from the required work or from the recommended work must be ordered separately and invoiced separately.

9.2 Required work

| | Every two years | | | | |
|---|----------------------------|---|---|---|---|
| | Every year | | | | |
| | Every 15,000 km (9,300 mi) | | | | |
| | Every 7,500 km (4,650 mi) | | | | |
| | After 1,000 km (620 mi) | | | | |
| Read out the fault memory using the KTM diagnostics tool. 🛠️ | ○ | ● | ● | ● | ● |
| Check that the electrical system is functioning properly. 🛠️ | ○ | ● | ● | ● | ● |
| Change the engine oil and oil filter and clean the oil screens. 🛠️ (📖 p. 144) | ○ | ● | ● | ● | ● |
| Check the brake discs. (📖 p. 94) | ○ | ● | ● | ● | ● |
| Check the front brake linings. (📖 p. 97) | ○ | ● | ● | ● | ● |
| Check the rear brake linings. (📖 p. 103) | ○ | ● | ● | ● | ● |
| Check the tire condition. (📖 p. 111) | ○ | ● | ● | ● | ● |
| Check the tire air pressure. (📖 p. 112) | ○ | ● | ● | ● | ● |
| Check the brake lines for damage and leakage. 🛠️ | ○ | ● | ● | ● | ● |
| Check the brake fluid level of the front brake. (📖 p. 95) | ○ | ● | ● | ● | |
| Check the rear brake fluid level. (📖 p. 100) | ○ | ● | ● | ● | |
| Check the shock absorber and fork for leaks. 🛠️ | ○ | ● | ● | ● | ● |
| Clean the dust boots of the fork legs. 🛠️ | | ● | ● | | |
| Check the chain, rear sprocket, and engine sprocket. (📖 p. 87) | | ● | ● | ● | ● |
| Check the chain tension. (📖 p. 84) | ○ | ● | ● | ● | ● |

9 SERVICE SCHEDULE

| | Every two years | | | | |
|---|----------------------------|---|---|---|---|
| | Every year | | | | |
| | Every 15,000 km (9,300 mi) | | | | |
| | Every 7,500 km (4,650 mi) | | | | |
| | After 1,000 km (620 mi) | | | | |
| Check the coolant level. (☞ p. 136) | ○ | ● | ● | ● | ● |
| Check that the radiator fan is functioning properly. 🛠️ | ○ | ● | ● | ● | ● |
| Change the air filter. Clean the air filter box. 🛠️ | | ● | ● | | |
| Check that the throttle cables are undamaged, routed without sharp bends, and set correctly. 🛠️ | ○ | ● | ● | ● | ● |
| Check the cables for damage and routing without sharp bends. 🛠️ | ○ | ● | ● | ● | ● |
| Check the valve clearance. 🛠️ | ○ | | | | |
| Check the valve clearance, change the spark plugs. 🛠️ | | | ● | | |
| Change the front brake fluid. 🛠️ | | | | | ● |
| Change the rear brake fluid. 🛠️ | | | | | ● |
| Check the play of the steering head bearing. 🛠️ | ○ | ● | ● | ● | ● |
| Check the headlight setting. (☞ p. 129) | ○ | ● | ● | | |
| Final check: Check the vehicle for roadworthiness and take a test ride. 🛠️ | ○ | ● | ● | ● | ● |
| Read out the error memory after the test ride using the KTM diagnostics tool. 🛠️ | ○ | ● | ● | ● | ● |
| Reset the service interval display. 🛠️ | ○ | ● | ● | | |
| Make the service entry in the KTM Dealer.net and in the Service and Warranty Booklet. 🛠️ | ○ | ● | ● | ● | ● |

- One-time interval
- Periodic interval

9.3 Recommended work

| | After 1,000 km (620 mi) | Every 7,500 km (4,650 mi) | Every year | Every four years |
|--|-------------------------|---------------------------|------------|------------------|
| Check the antifreeze. 🛠️ | ○ | ● | ● | |
| Change the coolant. 🛠️ | | | | ● |
| Grease all moving parts (e.g., side stand, hand lever, chain, ...) and check for smooth operation. 🛠️ | ○ | ● | ● | ● |
| Check all hoses (e.g. fuel, coolant, bleeder, drainage, etc.) and sleeves for cracking, leaks, and incorrect routing. 🛠️ | ○ | ● | ● | ● |
| Check the swingarm bearing. 🛠️ | | ● | | |
| Check the wheel bearing for play. 🛠️ | | ● | | |
| Check the screws and nuts for tightness. 🛠️ | ○ | ● | ● | ● |

- One-time interval
- Periodic interval

10.1 Adjusting the spring preload of the shock absorber ↴

- Warning**
Danger of accidents Modifications to the suspension settings can seriously alter the vehicle's ride behavior.
- Following modifications, ride slowly at first to get the feel of the new ride behavior.

- Info**
The spring preload defines the initial situation of the spring process on the shock absorber. The best spring preload setting is achieved when it is set for the weight of the rider and that of any baggage and a passenger, thus ensuring an ideal compromise between maneuverability and stability.



- Adjust the spring preload by turning adjusting ring **1**.

Guideline

| Spring preload | |
|----------------|-----------|
| Comfort | 1 click |
| Standard | 3 clicks |
| Sport | 6 clicks |
| Full payload | 10 clicks |


Hook wrench (T106S)

- Info**
The spring preload can be set to 10 different positions.

10.2 Adjusting the shift lever

i **Info**

The adjustment range of the shift lever is limited.

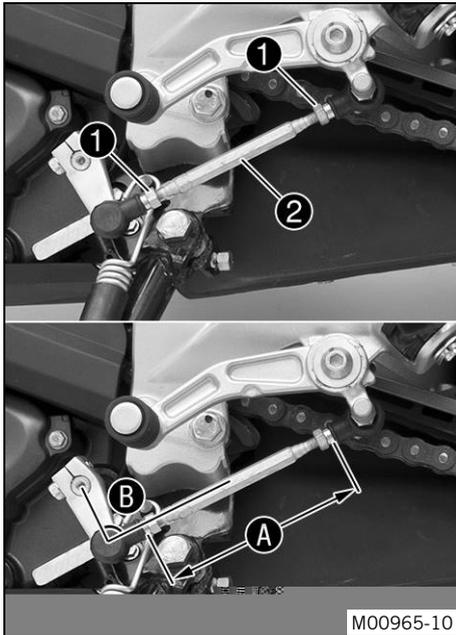

- Loosen nuts **1**.
- Adjust the shift lever by turning shift rod **2**.

Guideline

| | |
|-------------------------------------|--------------------------------|
| Shift rod adjustment range A | 110... 122 mm (4.33... 4.8 in) |
|-------------------------------------|--------------------------------|

i **Info**

Make the same adjustments on both sides.
At least five screw threads must be screwed into the seating.

- Check adjusting angle **B**.

Guideline

| | |
|--|-----|
| Adjusting angle B shift rod - linkage - shift lever | 90° |
|--|-----|

- Tighten nuts **1**.

i **Info**

After the nuts have been tightened, the bearings of the shift rod must be central and aligned identically to each other in order to ensure freedom of movement in the bearing shells.


- Check the shift lever to ensure it is functioning properly and can move freely.

11.1 Raising the motorcycle with the rear wheel stand

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

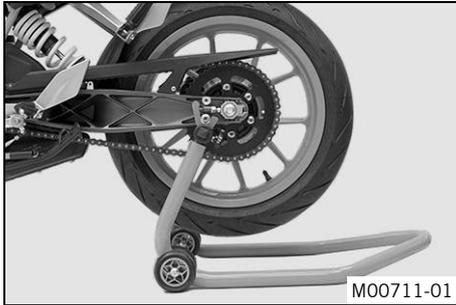

- Mount the supports of the wheel stand.
- Insert the adapter in the rear wheel stand.

| |
|--|
| Bushing kit for lifting gear (90229955044) |
|--|

| |
|-----------------------------------|
| Universal V adapter (61029955244) |
|-----------------------------------|

| |
|--------------------------------|
| Rear wheel stand (61029055400) |
|--------------------------------|

- Stand the motorcycle upright, align the lifting gear with the swingarm and the adapters, and lift the motorcycle.


11.2 Taking the motorcycle off of the rear wheel stand

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

11 SERVICE WORK ON THE CHASSIS

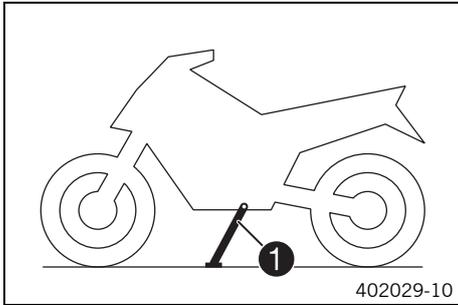

- Secure the motorcycle against falling over.
- Remove the rear wheel stand and lean the vehicle on the side stand ❶.

11.3 Raising the motorcycle with the front wheel stand

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

Preparatory work

- Raise the motorcycle with the rear wheel stand. (👉 p. 77)

Condition

- Remove protection cap ❶.





- Move the handlebar to the straight-ahead position. Position the wheel stand.

| |
|-----------------------|
| Adapter (61029955620) |
|-----------------------|

| |
|---------------------------------|
| Front wheel stand (61029055500) |
|---------------------------------|

**Info**

Always raise the rear of the motorcycle first.

- Raise the front of the motorcycle.

11.4 Taking the motorcycle off of the front wheel stand

Note


Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

**Main work**

- Secure the motorcycle against falling over.
- Remove the front wheel stand.

11 SERVICE WORK ON THE CHASSIS

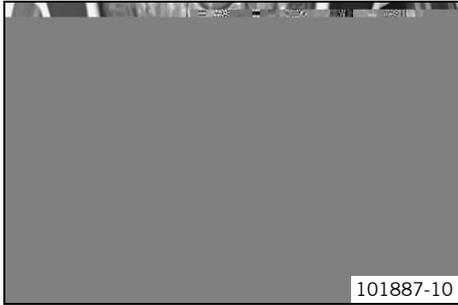


- Mount protection cap ❶.

Finishing work


- Take the motorcycle off of the rear wheel stand. (👉 p. 77)

11.5 Removing the passenger seat

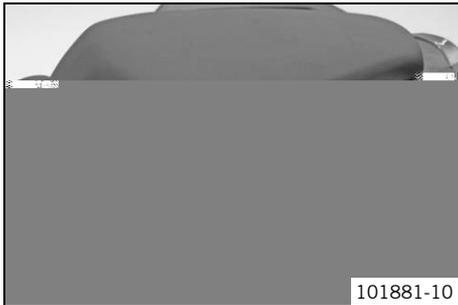


- Insert the ignition key in seat lock ❶ and turn it clockwise.
- Raise the rear of the seat, push it towards the rear, and remove it upwards.
- Remove the ignition key from the seat lock.

11.6 Mounting the passenger seat

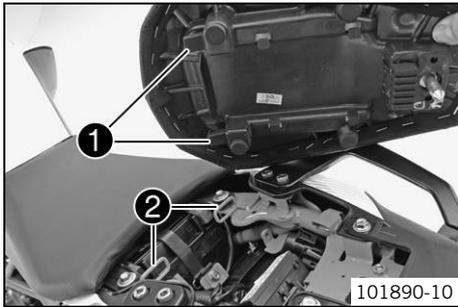

- Attach hooks **1** on the passenger seat to brackets **2** on the subframe, and lower it at the rear while pushing forward.
 - Press down the passenger seat until it clicks into place.
-

11.8 Mounting the seat

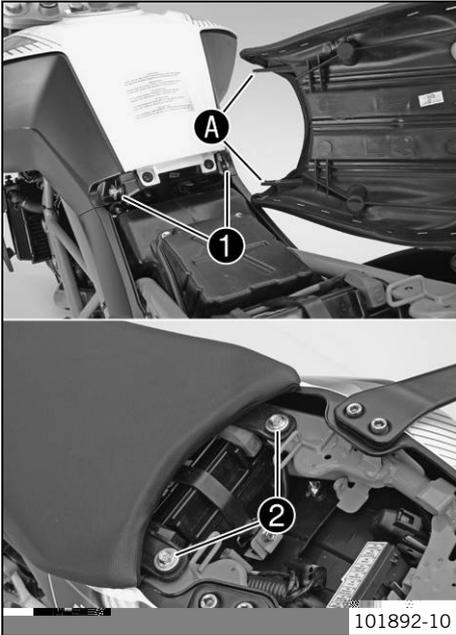

Main work

- Attach seat recesses **A** at screws **1** and lower at the rear.
- Mount and tighten screws **2**.


Guideline

| | | |
|-------------|----|-------------------|
| Screw, seat | M6 | 9 Nm (6.6 lbf ft) |
|-------------|----|-------------------|

Finishing work

- Mount the passenger seat. (👉 p. 81)

11.9 Checking for chain dirt accumulation

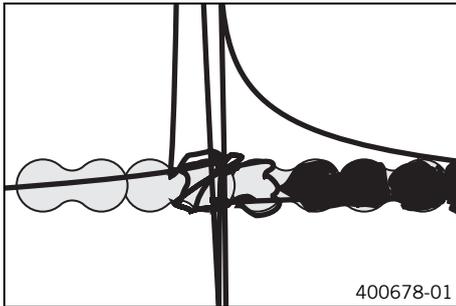

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (👉 p. 83)

11.10 Cleaning the chain



Warning

Danger of accidents Oil or grease on the tires reduces their grip.

- Remove oil and grease with a suitable cleaning material.



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

The service life of the chain depends largely on its maintenance.

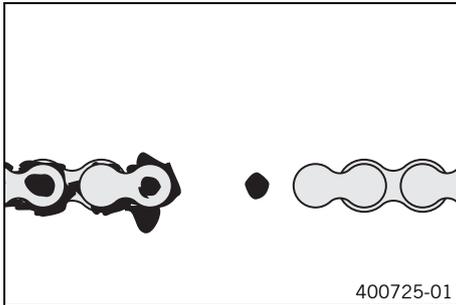

Preparatory work

- Raise the motorcycle with the rear wheel stand. (☞ p. 77)

Main work

- Clean the chain regularly.
- Rinse off loose dirt with a soft jet of water.
- Remove old grease remains with chain cleaner.

Chain cleaner (☞ p. 174)

- After drying, apply chain spray.

Chain lube for road use (☞ p. 174)

Finishing work

- Take the motorcycle off of the rear wheel stand. (☞ p. 77)


11.11 Checking the chain tension



Warning

Danger of accidents Danger caused by incorrect chain tension.

- If the chain is too taut, the components of the secondary power transmission (chain, engine sprocket, rear sprocket, bearings in the transmission and in the rear wheel) will be under additional load. In addition to premature wear, this can cause the chain or the countershaft of the transmission to break in extreme cases. If the chain is too loose, however, it may fall off the engine sprocket or rear sprocket and block the rear wheel or damage the engine. Ensure that the chain tension is correct and adjust it if necessary.

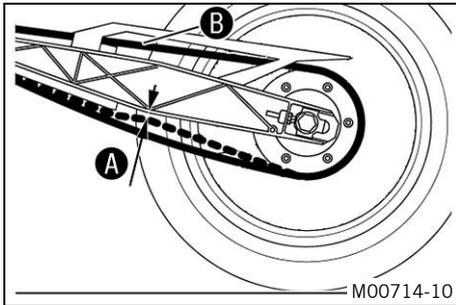

- Lean the motorcycle on the side stand.
- Shift gear to neutral.
- In the area of chain sliding guard, press the chain upward toward the swingarm and determine chain tension **A**.



Info

The upper chain section **B** must be taut.

Chain wear is not always even, so you should repeat this measurement at different chain positions.

| | |
|---------------|----------------------------|
| Chain tension | 5... 7 mm (0.2... 0.28 in) |
|---------------|----------------------------|

- » If the chain tension does not meet specifications:
 - Adjust the chain tension. (☛ p. 85)

11.12 Adjusting the chain tension




Warning

Danger of accidents Danger caused by incorrect chain tension.

- If the chain is too taut, the components of the secondary power transmission (chain, engine sprocket, rear sprocket, bearings in the transmission and in the rear wheel) will be under additional load. In addition to premature wear, this can cause the chain or the countershaft of the transmission to break in extreme cases. If the chain is too loose, however, it may fall off the engine sprocket or rear sprocket and block the rear wheel or damage the engine. Ensure that the chain tension is correct and adjust it if necessary.

Preparatory work

- Check the chain tension. (☛ p. 84)

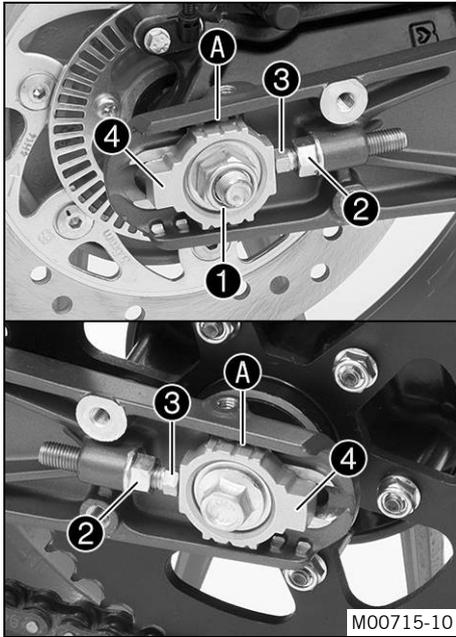

Main work

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ left and right.

Guideline

| | |
|--|----------------------------|
| Chain tension | 5... 7 mm (0.2... 0.28 in) |
| Turn adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters ④ are in the same position relative to reference marks ①. The rear wheel is then correctly aligned. | |

i Info


The upper part of the chain must be taut.
Chain wear is not always even, so you should check the setting at different chain positions.

- Tighten nuts ②.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.

Guideline

| | | |
|-------------------------|---------|------------------------|
| Nut, rear wheel spindle | M14x1.5 | 90 Nm (66.4 lbf ft) |
|-------------------------|---------|------------------------|

11.13 Checking the chain, rear sprocket, and engine sprocket

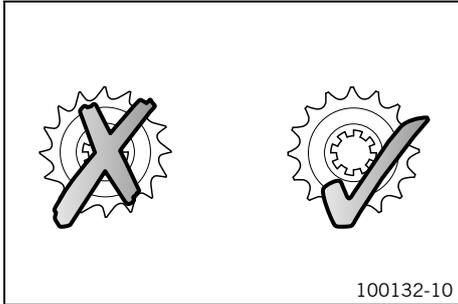


- Check the rear sprocket and motor sprocket for wear.
 - » If the rear sprocket and motor sprocket are worn:
 - Change the power set. 🛠️



Info

The motor sprocket, rear sprocket, and chain should always be replaced together.

11 SERVICE WORK ON THE CHASSIS

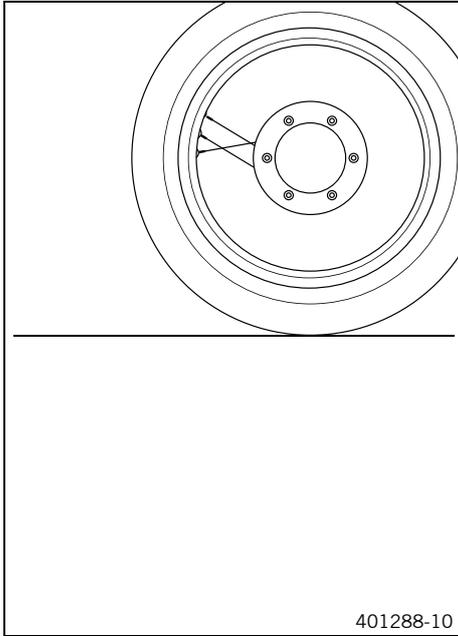

- Shift gear to neutral.
- Pull the lower chain section with specified weight **A**.

Guideline

| | |
|--------------------------------|----------------|
| Weight, chain wear measurement | 15 kg (33 lb.) |
|--------------------------------|----------------|

- Measure the distance **B** of 20 chain links in the lower chain section.

i **Info**
Chain wear is not always even, so you should repeat this measurement at different chain positions.

| | |
|--|----------------------|
| Maximum distance B at the longest chain section | 301.6 mm (11.874 in) |
|--|----------------------|

- » If distance **B** is greater than the specified measurement:
 - Change the power set. 🛠️


i **Info**
When the chain is replaced, the rear sprocket and engine sprocket should also be changed.
New chains wear out faster on old, worn sprockets.

11 SERVICE WORK ON THE CHASSIS



M00716-10

- Loosen screw ①.
- Remove screw ②.
- Remove nut ③.
- Push the chain guard aside.

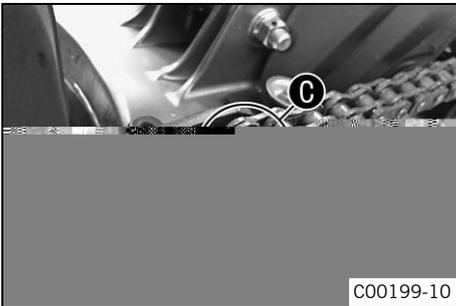

C00199-10

- Check the chain sliding guard for wear.
 - » If the chain sliding guard has lost material due to wear to the extent that, in area ①, drilled hole ② is visible from above:
 - Change the chain sliding guard. 🔧
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the screws on the chain sliding guard.

11 SERVICE WORK ON THE CHASSIS



- Position the chain guard and tighten screw ❶.

Guideline

| | | |
|--------------------|-----------------|-----------------|
| Screw, chain guard | EJOT PT® K60x20 | 4 Nm (3 lbf ft) |
|--------------------|-----------------|-----------------|

- Mount and tighten screw ❷.

Guideline


| | | |
|--------------------|-----------------|-----------------|
| Screw, chain guard | EJOT PT® K60x20 | 4 Nm (3 lbf ft) |
|--------------------|-----------------|-----------------|

- Mount and tighten the nut ❸.


Guideline

| | | |
|-------------------------|----|-------------------|
| Remaining nuts, chassis | M5 | 5 Nm (3.7 lbf ft) |
|-------------------------|----|-------------------|

11.14 Removing the front spoiler

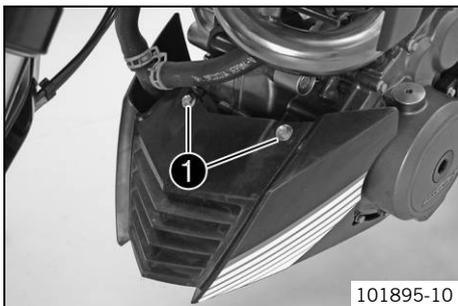


- Remove screws ①.

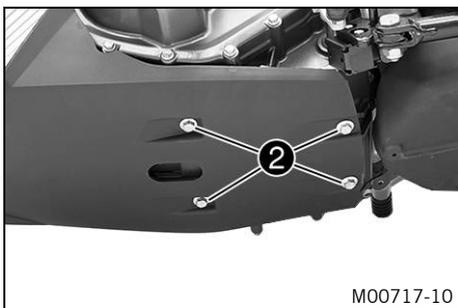


- Remove screws ②.
- Take off the front spoiler.

11.15 Fitting front spoiler

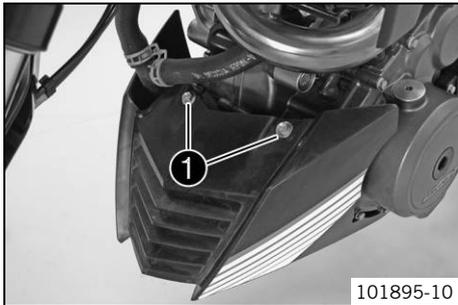

- Position the front spoiler. Mount screws **1** but do not tighten yet.

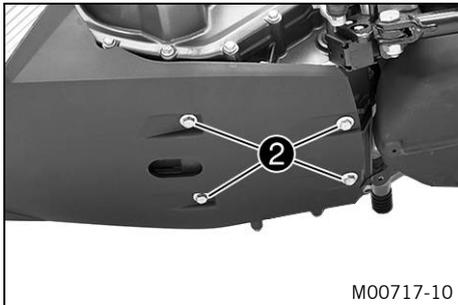

- Mount and tighten screws **2**.

Guideline


| | | |
|----------------------|----|-------------------|
| Screw, front spoiler | M6 | 7 Nm (5.2 lbf ft) |
|----------------------|----|-------------------|

- Tighten screw **1**.

Guideline

| | | |
|----------------------|----|-------------------|
| Screw, front spoiler | M6 | 7 Nm (5.2 lbf ft) |
|----------------------|----|-------------------|

12.1 Antilock Braking System (ABS)

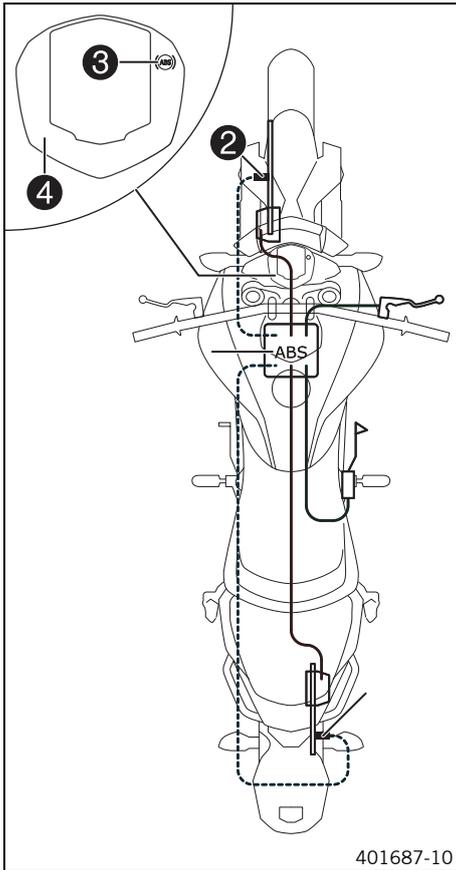

The ABS unit **1**, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the seat. A wheel speed sensor **2** is located at the front and rear wheels.



Warning

Danger of accidents Changes to the vehicle impair the function of the ABS.

- Only allow the rear wheel to spin with the front brake applied if the ABS is switched off (burn out).
- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by KTM.
- Only use tires/wheels approved by KTM with the corresponding speed index.
- Maintain the specified tire air pressure.
- Service work and repairs must be performed professionally. (Your authorized KTM workshop will be glad to help.)

The ABS is a safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces.



Warning

Danger of accidents Vehicle rollover

- It is not always possible to prevent vehicle rollover in extreme riding situations (e. g. luggage loaded with a high center of gravity, varying road surfaces, steep descents, full braking without disengaging the gear). Adapt your riding style to the road conditions and your driving ability.

The ABS operates with two independent brake circuits (front and rear brakes). During normal operation, the brake system operates like a conventional brake system without ABS. When the ABS control unit detects a locking tendency in a wheel, ABS begins regulating

the brake pressure. The regulating process causes a slight pulsing of the hand and foot brake levers.

ABS warning lamp **3** must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it lights up while riding, this indicates a fault in the ABS. In this case, the ABS is no longer enabled and the wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning lamp may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when making wheelies or if the rear wheel spins. This causes the ABS to switch off.

To reenale the ABS, the vehicle must be stopped and the ignition switched off. The ABS is reenabled when the vehicle is switched on again. The ABS warning lamp goes out when you start off.

Button **4** can be used to switch ABS off manually (see Starting).


12.2 Checking the brake discs



Warning

Danger of accidents Reduced braking efficiency due to worn brake disc(s).

- Change the worn brake disc(s) without delay. (Your authorized KTM workshop will be glad to help.)

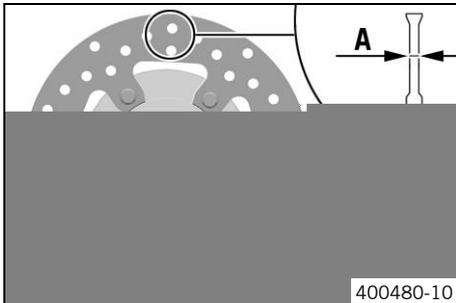

- Check the thickness of the front and rear brake discs at several places on the disk to see if it conforms to measurement **A**.



Info

Wear reduces the thickness of the brake disc in area **1** of the brake disc.

Brake discs - wear limit

| | |
|-------|-------------------|
| Front | 3.6 mm (0.142 in) |
| Rear | 3.6 mm (0.142 in) |

- » If the brake disc thickness is less than the specified value:
 - Change the brake discs. 🛠️
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc shows signs of damage, cracking, or deformation:
 - Change the brake discs. 🛠️

12.3 Checking the brake fluid level of the front brake



Warning

Danger of accidents Failure of the brake system.


- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)

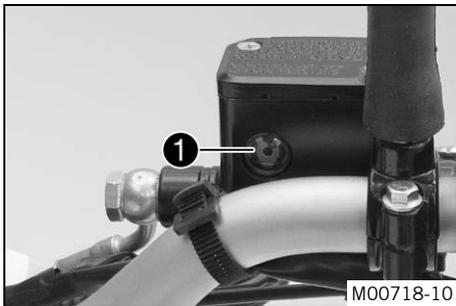

12.4 Adding front brake fluid



Warning

Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid comes into contact with the eyes, flush the eyes thoroughly with water and consult a physician immediately.



Warning

Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.




Info

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
Use only clean brake fluid from a sealed container.

Preparatory work

- Check the front brake linings. ( p. 97)

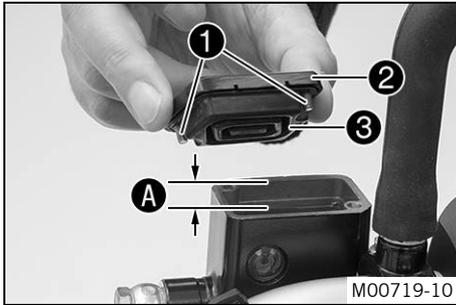

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.
- Add brake fluid to level A.

Guideline

| | |
|---------|---------------|
| Level A | 5 mm (0.2 in) |
|---------|---------------|

| |
|--|
| Brake fluid DOT 4 / DOT 5.1 (☞ p. 171) |
|--|

- Position the cover with the membrane. Mount and tighten the screws.

i Info

Clean up overflowed or spilt brake fluid immediately with water.

12.5 Checking the front brake linings



Warning


Danger of accidents Reduced braking efficiency caused by worn brake linings.

- Change worn brake linings immediately. (Your authorized KTM workshop will be glad to help.)

Note

Danger of accidents Reduced braking efficiency caused by damaged brake discs.

- If the brake linings are not changed in time, the steel brake lining carriers grind on the brake disc. The braking effect is greatly reduced and the brake discs are destroyed. Check the brake linings regularly.

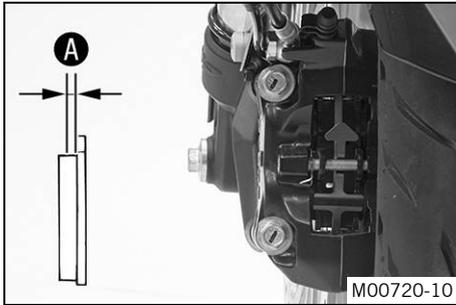

- Check the brake linings for minimum thickness **A**.

| | |
|----------------------------|---|
| Minimum thickness A | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---|

- » If the minimum thickness is less than specified:
 - Change the front brake linings. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is wear or tearing:
 - Change the front brake linings. 🛠️


12.6 Checking the free travel of foot brake lever



Warning

Danger of accidents Brake system failure.

- If there is no free travel on the foot brake lever, pressure builds up on the rear brake circuit. The rear brake can fail due to overheating. Adjust the free travel on foot brake lever according to specifications.

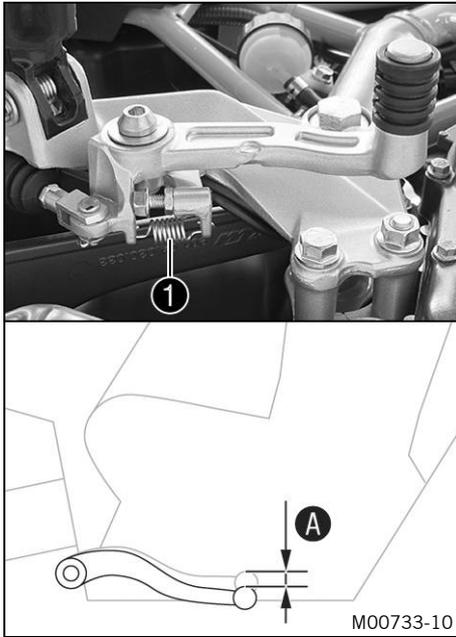

- Disconnect spring ❶.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel ❸.

Guideline

| | |
|---------------------------------|----------------------------|
| Free travel at foot brake lever | 3... 5 mm (0.12... 0.2 in) |
|---------------------------------|----------------------------|

- » If the free travel does not meet specifications:
 - Adjust the free travel of the foot brake lever. 🛠️ (📄 p. 99)
- Reconnect spring ❶.


12.7 Adjusting the free travel of the foot brake lever 🛠️



Warning

Danger of accidents Brake system failure.

- If there is no free travel on the foot brake lever, pressure builds up on the rear brake circuit. The rear brake can fail due to overheating. Adjust the free travel on foot brake lever according to specifications.

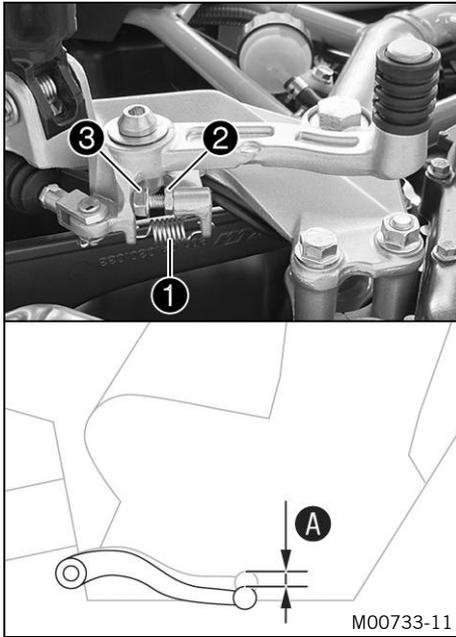

- Disconnect spring ❶.
- Release nut ❷ and use screw ❸ to adjust the specified free travel A.

Guideline

| | |
|---------------------------------|----------------------------|
| Free travel at foot brake lever | 3... 5 mm (0.12... 0.2 in) |
|---------------------------------|----------------------------|



Info

The range of adjustment is limited.

- Hold screw ❸ and tighten nut ❷.
- Attach spring ❶.

12.8 Checking the rear brake fluid level



Warning

Danger of accidents Failure of the brake system.


- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)

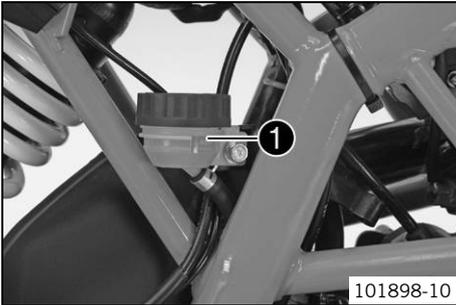

- Stand the vehicle upright.
- Check the brake fluid level in the brake fluid reservoir.
 - » If the fluid level reaches the **MIN** marking ❶:
 - Add rear brake fluid. 🛠️ (👉 p. 101)

12.9 Adding rear brake fluid 🛠️



Warning

Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid comes into contact with the eyes, flush the eyes thoroughly with water and consult a physician immediately.



Warning

Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
Use only clean brake fluid from a sealed container.

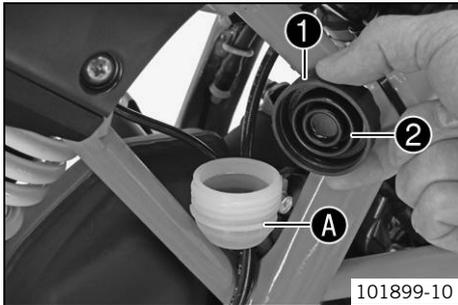

Preparatory work

- Check the rear brake linings. (👉 p. 103)

Main work

- Stand the vehicle upright.
- Remove screw cap **1** with membrane **2**.
- Add brake fluid to level **A**.

Brake fluid DOT 4 / DOT 5.1 (👉 p. 171)

- Refit screw cap with membrane.



Info

Clean up overflowed or spilt brake fluid immediately with water.

12.10 Checking the rear brake linings



Warning


Danger of accidents Reduced braking efficiency caused by worn brake linings.

- Change worn brake linings immediately. (Your authorized KTM workshop will be glad to help.)

Note

Danger of accidents Reduced braking efficiency caused by damaged brake discs.

- If the brake linings are not changed in time, the steel brake lining carriers grind on the brake disc. The braking effect is greatly reduced and the brake discs are destroyed. Check the brake linings regularly.

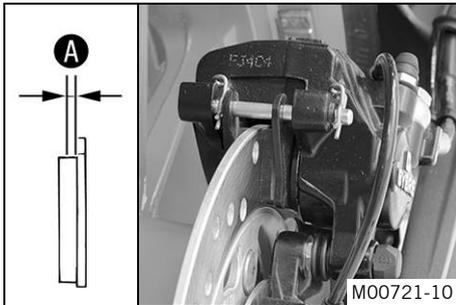

- Check the brake linings for minimum thickness **A**.

| | |
|----------------------------|---|
| Minimum thickness A | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---|

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is wear or tearing:
 - Change the rear brake linings. 🛠️


13.2 Installing the front wheel ↗




Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

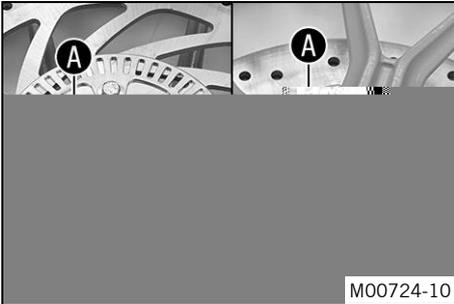

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the wheel bearing. ↗
 - Clean and grease the shaft seal rings ① and mating surfaces ① of the spacers.
- Long-life grease (↗ p. 174)
- Insert the spacers.

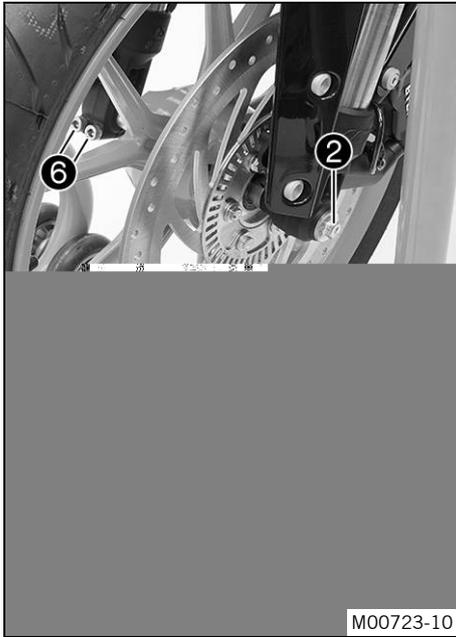

M00723-10

- Clean the thread of the wheel spindle and screw ②.
- Clean and grease wheel spindle.

| |
|-----------------------------|
| Long-life grease (☛ p. 174) |
|-----------------------------|

- Position the front wheel and insert the wheel spindle.
✓ The brake linings are correctly positioned.
- Mount and tighten screw ②.

Guideline

| | | |
|----------------------------|----|------------------------|
| Screw, front wheel spindle | M8 | 25 Nm (18.4 lbf ft) |
|----------------------------|----|------------------------|

- Position wheel speed sensor ③ in the drill hole.
- Mount and tighten screw ④.

Guideline

| | | |
|----------------------------------|----|-------------------|
| Screw, wheel speed sensor holder | M6 | 8 Nm (5.9 lbf ft) |
|----------------------------------|----|-------------------|


- Mount and tighten screws ⑤.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.
- Take the motorcycle off of the front wheel stand. (☛ p. 79)
- Take the motorcycle off of the rear wheel stand. (☛ p. 77)
- Operate the front brake and compress the fork a few times firmly.
✓ The fork legs straighten.

- Tighten screws ⑥.

Guideline

| | | |
|------------------|----|------------------------|
| Screw, fork stub | M8 | 15 Nm (11.1 lbf ft) |
|------------------|----|------------------------|

13.3 Removing the rear wheel ↩

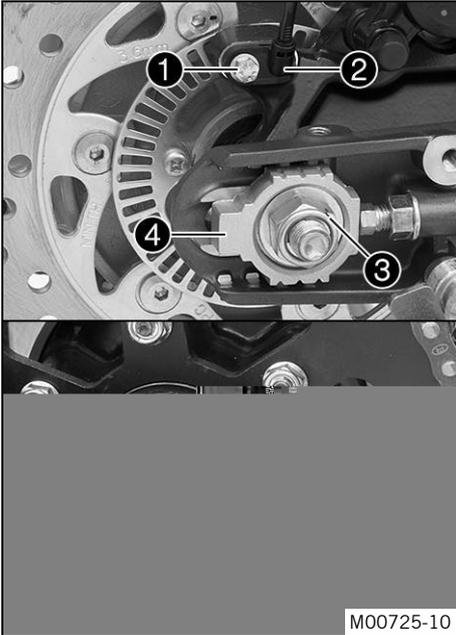

Preparatory work

- Raise the motorcycle with the rear wheel stand. (🔧 p. 77)

Main work

- Remove screw ❶ and pull wheel speed sensor ❷ out of the hole.
- Remove nut ❸ and washer.
- Remove chain adjuster ❹.
- Holding the rear wheel, withdraw wheel spindle ❺ with the washer and chain adjuster ❹.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



Warning

Danger of accidents Reduced braking effect caused by damaged brake discs.

- Always lay the wheel down in such a way that the brake discs are not damaged.
-
- Pull the rear wheel back and take it out of the swingarm.



Info

Do not operate the foot brake lever when the rear wheel is removed.

13.4 Installing the rear wheel 🛠️



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.


- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.



Warning

Danger of accidents No braking effect when operating the rear brake.

- After installing the rear wheel, always operate the foot brake until the pressure point is reached.

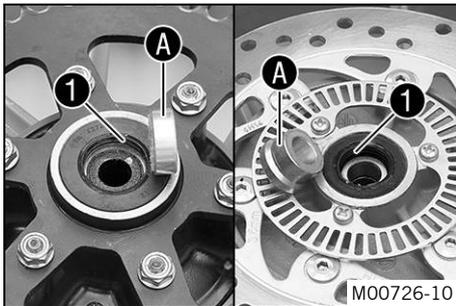


Main work

- Check the rear hub rubber dampers. 🛠️ (👉 p. 109)
- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the wheel bearing. 🛠️
- Clean and grease the shaft seal rings **1** and mating surfaces **A** of the spacers.

Long-life grease (👉 p. 174)
- Clean the thread of the wheel spindle and axle nut.
- Clean and grease wheel spindle.

Long-life grease (👉 p. 174)
- Clean the mating surfaces of the brake caliper support and swingarm.
- Install the rubber damper and rear sprocket carrier on the rear wheel.
- Position the rear wheel.
 - ✓ The brake linings are correctly positioned.
- Push the rear wheel as far forward as possible and place the chain on the rear sprocket.

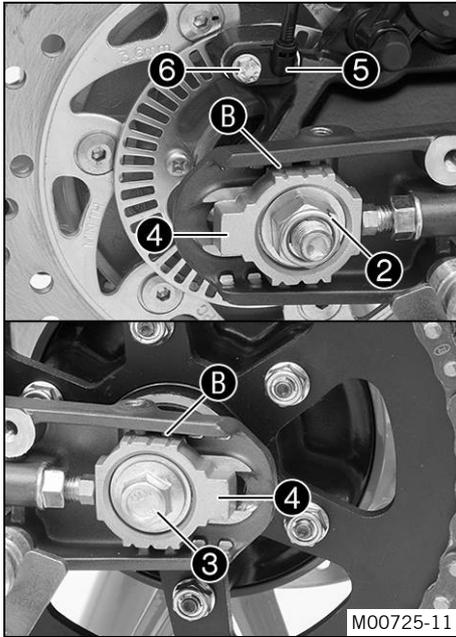

M00725-11

- Pull the rear wheel back and mount wheel spindle **3** with the washer and chain adjuster **4**.

Guideline

Mount the left and right chain adjusters **4** in the same position.

- Mount nut **2** and washer.
- Push the rear wheel forward so that the chain adjusters are in contact with the screws, and tighten nut **2**.

Guideline

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to the reference marks **B**.

| | | |
|-------------------------|---------|------------------------|
| Nut, rear wheel spindle | M14x1.5 | 90 Nm (66.4 lbf ft) |
|-------------------------|---------|------------------------|

- Position wheel speed sensor **5** in the drill hole.
- Mount and tighten screw **6**.

Guideline

| | | |
|----------------------------------|----|-------------------|
| Screw, wheel speed sensor holder | M6 | 8 Nm (5.9 lbf ft) |
|----------------------------------|----|-------------------|



Finishing work

- Take the motorcycle off of the rear wheel stand. (🔧 p. 77)
- Check the chain tension. (🔧 p. 84)

13.5 Checking the rear hub rubber dampers 🛠️

i Info

The engine power is transmitted from the rear sprocket to the rear wheel via 6 rubber dampers. They eventually wear out during operation. If the rubber dampers are not changed in time, the rear sprocket carrier and the rear hub will be damaged.

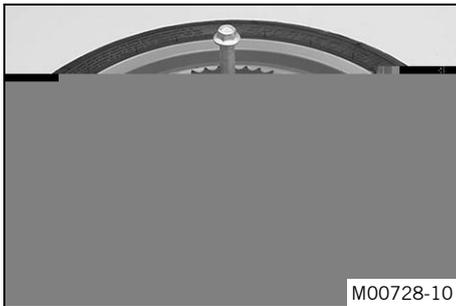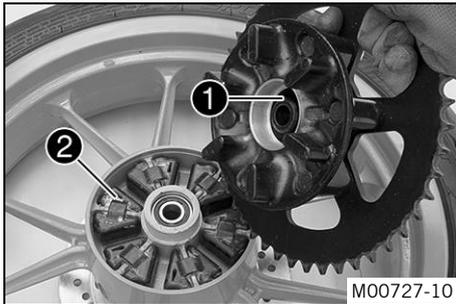

Preparatory work

- Raise the motorcycle with the rear wheel stand. (☞ p. 77)
- Remove the rear wheel. ☞ (☞ p. 107)

Main work

- Check bearing ①.
 - » If the bearing is damaged or worn:
 - Change the bearing. ☞
- Check the rubber dampers ② of the rear hub for damage and wear.
 - » If the rubber dampers of the rear hub are damaged or worn:
 - Change all rubber dampers in the rear hub.

- Lay the rear wheel on a workbench with the rear sprocket facing upwards and insert the wheel spindle in the hub.
- To check the play A, hold the rear wheel tight and try to rotate the rear sprocket.



Info

Measure the play on the outside of the rear sprocket.

| | |
|------------------------------------|-------------------|
| Play in rubber dampers, rear wheel | ≤ 5 mm (≤ 0.2 in) |
|------------------------------------|-------------------|

- » If play A is larger than the specified value:
 - Change all rubber dampers in the rear hub.

Finishing work

- Install the rear wheel. ☞ (☞ p. 108)
- Take the motorcycle off of the rear wheel stand. (☞ p. 77)
- Check the chain tension. (☞ p. 84)

13.6 Checking the tire condition



Warning

Danger of accidents Uncontrollable vehicle handling in the event of a flat tire.

- In the interest of safety, replace damaged or worn tires immediately. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of crashing Poor vehicle handling due to different tire tread patterns on front and rear wheels.

- The front and rear wheels must be fitted with tires with similar tread patterns to prevent loss of control over the vehicle.



Warning


Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Info

The type, condition and air pressure of the tires all have a major impact on the riding behavior of the motorcycle. Worn tires have a negative effect on riding behavior, especially on wet surfaces.

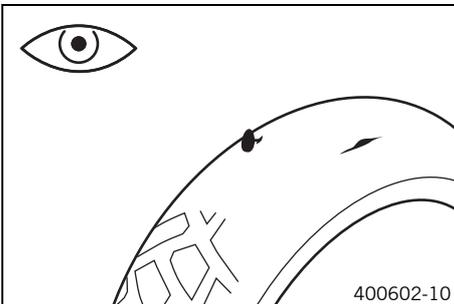

- Check the front and rear tires for cuts, run-in objects and other damage.
 - » If the tires exhibit cuts, run-in objects or other damage:
 - Change the tires.
- Check the depth of the tread.



Info

Note local national regulations concerning the minimum tread depth.

| | |
|---------------------|---|
| Minimum tread depth | $\geq 2 \text{ mm } (\geq 0.08 \text{ in})$ |
|---------------------|---|

- » If the tread depth is less than the minimum permissible depth:
 - Change the tires.
- Check the age of the tires.

i **Info**


The tire's date of the manufacture is usually part of the tire markings and is indicated by the last four digits of the **DOT** marking. The first two digits refer to the week of manufacture and last two digits refer to the year of manufacture. KTM recommends that the tires are changed regardless of the actual wear, at the latest after 5 years.

- » If a tire is more than 5 years old:
 - Change the tires.

13.7 Checking the tire air pressure

i **Info**

Low tire air pressure leads to abnormal wear and overheating of the tire. Correct tire air pressure ensures optimal riding comfort and maximum tire service life.

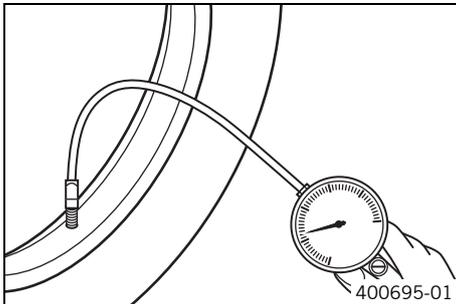

- Remove the dust cap.
- Check tire air pressure when the tires are cold.

| | |
|-------------------------|------------------|
| Tire air pressure, solo | |
| Front | 2.0 bar (29 psi) |
| Rear | 2.0 bar (29 psi) |

| | |
|---|------------------|
| Tire air pressure with passenger/full payload | |
| Front | 2.0 bar (29 psi) |
| Rear | 2.2 bar (32 psi) |

13 WHEELS, TIRES

- » If the tire air pressure does not meet specifications:
 - Correct the tire air pressure.
- Mount the dust cap.

14.1 Removing the battery ↩



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.


- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep sparks and open flames away from the battery. Only charge in well-ventilated rooms.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a physician.


Preparatory work

- Remove the passenger seat. (↩ p. 80)
- Remove the seat. (↩ p. 81)

Main work

- Pull back the negative terminal cover ①.
- Disconnect negative cable ② from the battery.

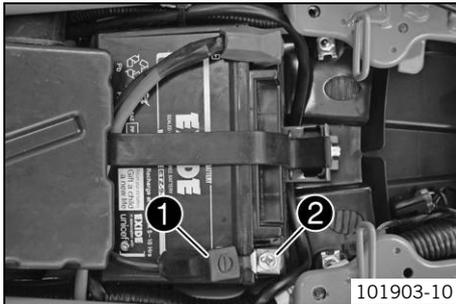

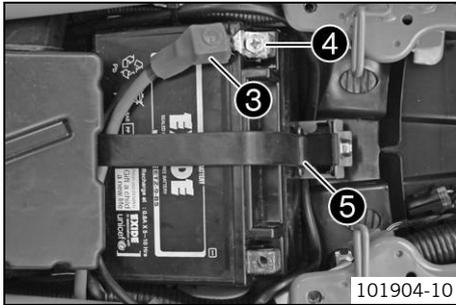


- Pull back the positive terminal cover ③.
- Disconnect positive cable ④ from the battery.
- Detach rubber band ⑤.
- Pull the battery up and out of the battery holder.

i Info

Never operate the motorcycle with a discharged battery or without a battery. In both cases, electrical components and safety devices can be damaged. The vehicle is therefore no longer roadworthy.

14.2 Installing the battery ↩

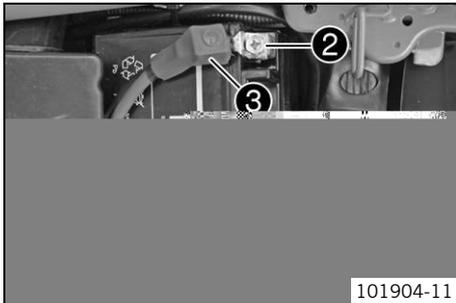

Main work


- Position the battery in the battery holder.

Guideline

The terminals of the battery must face upwards.

Battery (ETZ-9-BS) (↩ p. 164)

- Reconnect rubber band ①.
- Position the positive cable ② and mount and tighten the screw.
- Position positive terminal cover ③.

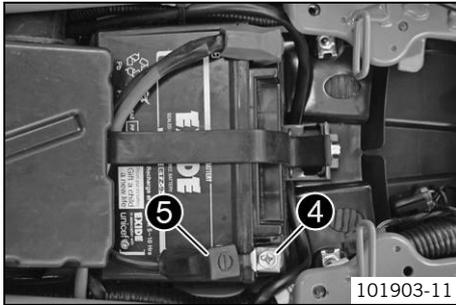

- Position the negative cable ④ and mount and tighten the screw.
- Position the negative terminal cover ⑤.

Finishing work

- Mount the seat. (☛ p. 82)
- Mount the passenger seat. (☛ p. 81)
- Set the clock. (☛ p. 47)

14.3 Recharging the battery ↩



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep sparks and open flames away from the battery. Only charge in well-ventilated rooms.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a physician.



Warning

Environmental hazard The battery contains elements that are harmful to the environment.

- Do not dispose of batteries with the household waste. Dispose of a defective battery in an environmentally friendly manner. Give the battery to your authorized KTM dealer or dispose of it at a collection point for used batteries.
-



Info

Even when there is no load on the battery, it discharges steadily.

The charging level and the method of charging are very important for the service life of the battery.

Rapid recharging with a high charging current shortens the battery's service life.

If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the battery capacity.


If the battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.

If the battery is left in a discharged state for an extended period, it will become over-discharged and sulfate, destroying the battery.

The battery is maintenance-free. The acid level does not have to be checked.

Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the passenger seat. (☛ p. 80)
- Remove the seat. (☛ p. 81)
- Disconnect the negative cable of the battery to avoid damage to the onboard electronics.

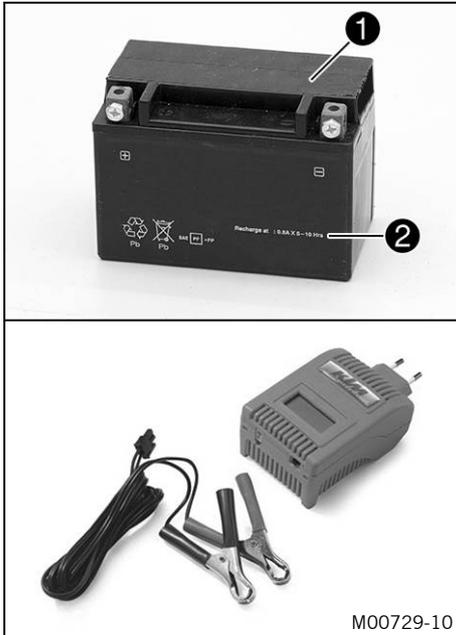

Main work

- Connect the battery charger to the battery. Switch on the battery charger.

| |
|-------------------------------|
| Battery charger (58429074000) |
|-------------------------------|

You can also use the battery charger to test rest potential and start potential of the battery, and to test the alternator. With this device, you cannot overcharge the battery.

Info

Never remove lid ①.

Charge the battery with a maximum of 10% of the capacity specified on battery housing ②.

- Switch off the battery charger after charging and disconnect from the battery.

Guideline

| | |
|--|--|
| The charge current, charge voltage and charge time must not be exceeded. | |
|--|--|

| | |
|--|----------|
| Charge the battery regularly when the motorcycle is not in use | 3 months |
|--|----------|

- Position the negative cable and mount and tighten the screw.
- Position the negative terminal cover.

Finishing work

- Mount the seat. (☛ p. 82)
- Mount the passenger seat. (☛ p. 81)
- Set the clock. (☛ p. 47)

14.4 Changing the ABS fuses



Warning

Fire hazard The electrical system can be overloaded if the wrong fuses are used.

- Use only fuses with the prescribed amperage. Never bypass or repair fuses.



Info

Two fuses for the ABS are located under the passenger seat. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

Preparatory work

- Switch off all power consumers and the engine.
- Remove the passenger seat. (☛ p. 80)

To change the fuse of the ABS hydraulic unit:

- Take off the protection cap and remove fuse ①.



Info

A defective fuse is indicated by a burned-out fuse wire ①.





Warning

Fire hazard The electrical system can be overloaded if the wrong fuses are used.

- Use only fuses with the prescribed amperage. Never bypass or repair fuses.
- Use spare fuses with the correct rating only.

Fuse (75011088015) (☛ p. 164)

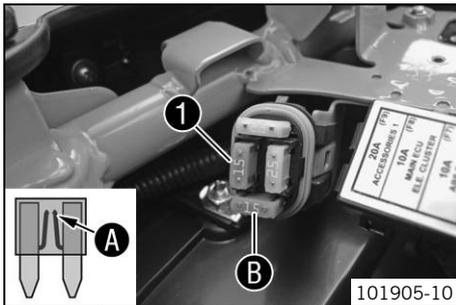

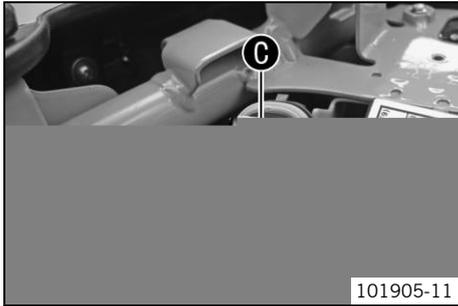

i **Tip**

Replace spare fuse **B** in the fuse box so that it is available if needed.

- Mount the protection cap.

To change the fuse of the ABS return pump:

- Take off the protection cap and remove fuse **2**.
-



Warning

Fire hazard The electrical system can be overloaded if the wrong fuses are used.

- Use only fuses with the prescribed amperage. Never bypass or repair fuses.
-
- Use spare fuses with the correct rating only.

Fuse (90111088025) (☛ p. 164)

i **Tip**

Replace spare fuse **C** in the fuse box so that it is available if needed.

- Mount the protection cap.

Finishing work

- Mount the passenger seat. (☛ p. 81)

14.5 Changing the fuses of individual power consumers



Info

The fuse box with the main fuse and the fuses of the individual power consumers is located under the passenger seat.

Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the passenger seat. (🔧 p. 80)

Main work

- Open fuse box cover ❶.
- Remove the defective fuse.


Guideline

| |
|--|
| Fuse 1 - 30 A - main fuse |
| Fuse 2 - 15 A - combination instrument, alarm system (optional) |
| Fuse 3 - 15 A - control unit, fuel pump |
| Fuse 4 - 15 A - ignition coil |
| Fuse 5 - 15 A - radiator fan |
| Fuse 6 - 15 A - horn, brake light, turn signal, high beam, low beam, parking light, tail light, license plate lamp |
| Fuse 7 - 10 A - ABS control unit |
| Fuse 8 - 10 A - combination instrument, control unit |
| Fuse 9 - 10 A - auxiliary equipment |

i Info
A defective fuse is indicated by a burned-out fuse wire **A**.

⚠ Warning
Fire hazard The electrical system can be overloaded if the wrong fuses are used.

- Use only fuses with the prescribed amperage. Never bypass or repair fuses.

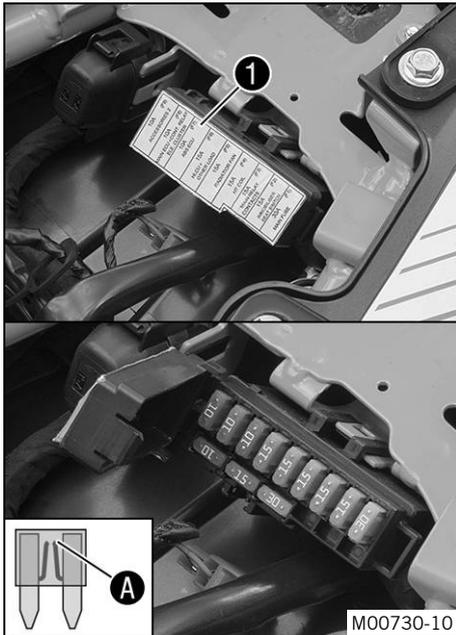

- Use spare fuses with the correct rating only.

| |
|-------------------------------|
| Fuse (75011088010) (☛ p. 164) |
|-------------------------------|

| |
|-------------------------------|
| Fuse (75011088015) (☛ p. 164) |
|-------------------------------|

| |
|-------------------------------|
| Fuse (75011088030) (☛ p. 164) |
|-------------------------------|

**Tip**

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover ①.

Finishing work

- Mount the passenger seat. (☛ p. 81)

14.6 Changing the headlight bulb

Note


Damage to reflector Reduced brightness.

- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.

Preparatory work


- Switch off all power consumers and switch off the engine.

14 ELECTRICAL SYSTEM

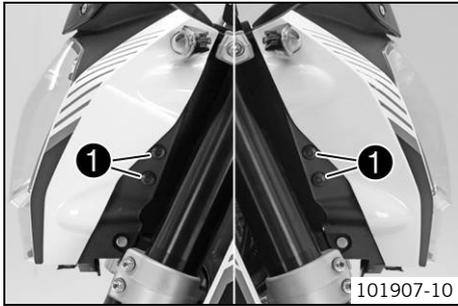


Main work

- Remove expanding rivets ①.

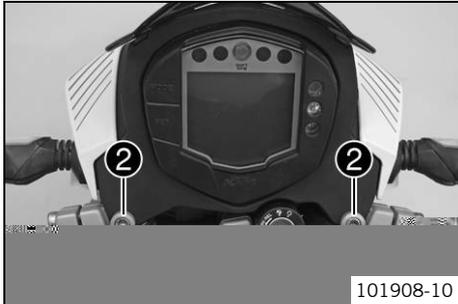


- Remove screws ②.
- Lift the headlight mask slightly and swing forward.

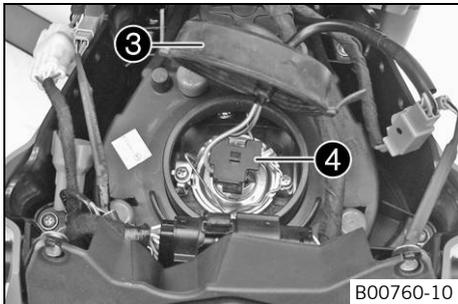

- Remove protection cap ③.
- Unplug connector ④.

14 ELECTRICAL SYSTEM

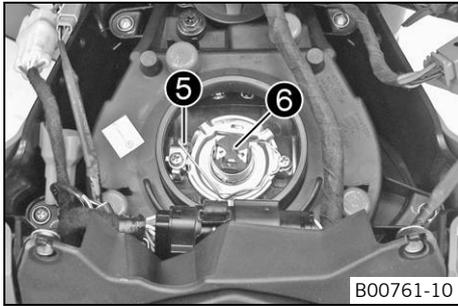



- Detach retaining clamp ⑤.
- Remove headlight bulb ⑥.
- Position the new headlight bulb in the headlight housing.

Guideline

Insert the headlight bulb so that the catches latch into the recesses.

Headlight (H4/socket P43t) (☛ p. 164)


- Attach retaining clamp ⑤.
- Plug in connector ④.
- Mount protection cap ③.

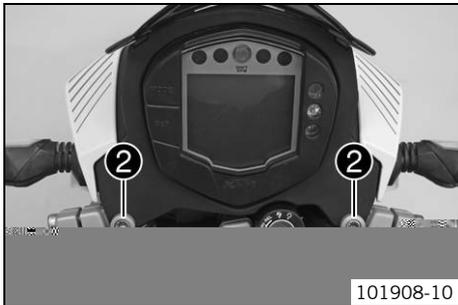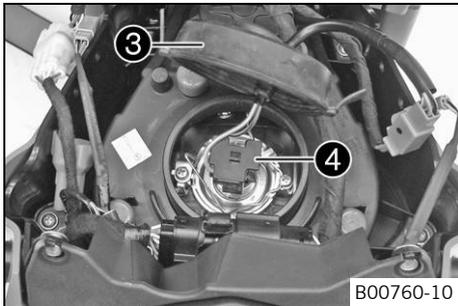

- Fold the headlight mask up.
- Mount and tighten screws ②.

Guideline

| | | | |
|-----------------------|----|----------------------|---------------|
| Screw, headlight mask | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
|-----------------------|----|----------------------|---------------|

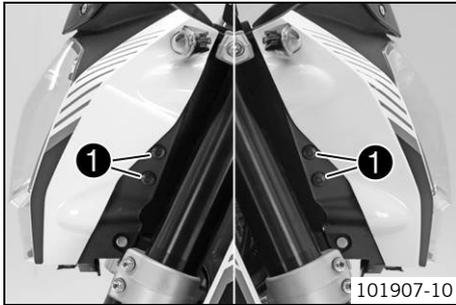

- Mount expanding rivets **1** on both sides.
- Check that the lighting is functioning properly.

14.7 Changing the parking light bulb

Note

Damage to reflector Reduced brightness.


- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.

Preparatory work


- Switch off all power consumers and switch off the engine.

Main work


- Remove expanding rivets **1**.

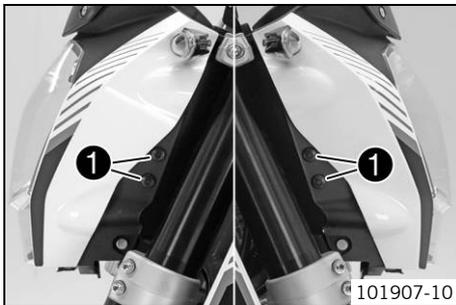


14 ELECTRICAL SYSTEM

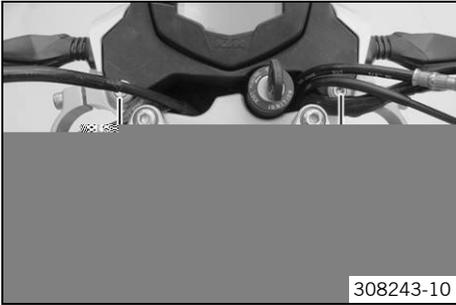

- Remove screws ②.
- Lift the headlight mask slightly and swing forward.

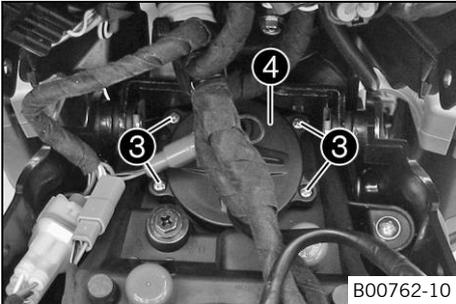


- Remove screws ③.
- Remove cover ④.

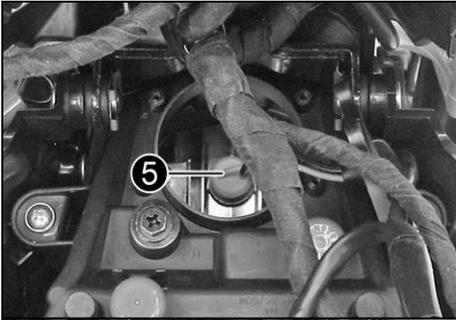


- Pull the socket with bulb 5 out of the housing.
- Remove the bulb.
- Position a new light bulb in the socket.

Parking light (W5W/socket W2.1x9.5d) (p. 164)

- Position the socket with bulb 5 in the housing.

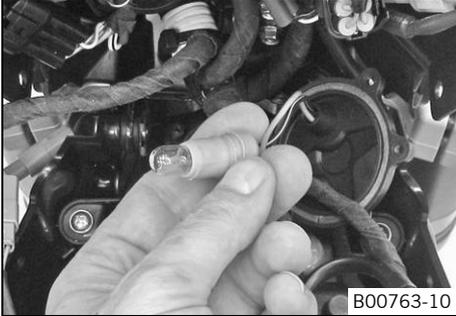


B00763-10

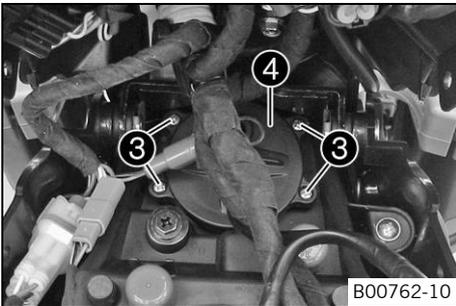

- Position cover 4.
- Mount and tighten screws 3.

B00762-10


14 ELECTRICAL SYSTEM

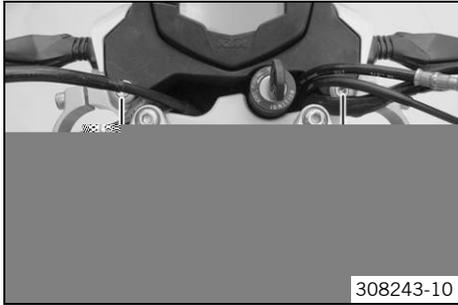

- Fold the headlight mask up.
- Mount and tighten screws ②.


Guideline

| | | | |
|-----------------------|----|----------------------|---------------|
| Screw, headlight mask | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
|-----------------------|----|----------------------|---------------|

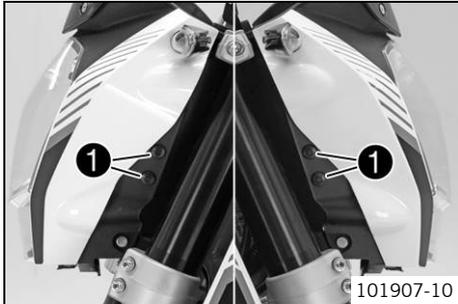

- Mount expanding rivets ① on both sides.
- Check that the lighting is functioning properly.

14.8 Checking the headlight setting

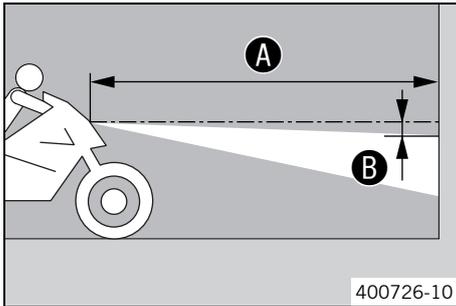

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance **B** under the first mark.

Guideline

| | |
|-------------------|-------------|
| Distance B | 5 cm (2 in) |
|-------------------|-------------|

- Position the vehicle perpendicular to the wall at a distance **A** from the wall and switch on the low beam.

Guideline


| | |
|-------------------|-------------|
| Distance A | 5 m (16 ft) |
|-------------------|-------------|

- The rider, with luggage and passenger if applicable, now mounts the motorcycle.
- Check the headlight setting.

The light-dark boundary must lie exactly on the lower mark when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.


- » If the boundary between light and dark does not meet specifications:
 - Adjust the headlight range. (☛ p. 130)

14.9 Adjusting the headlight range

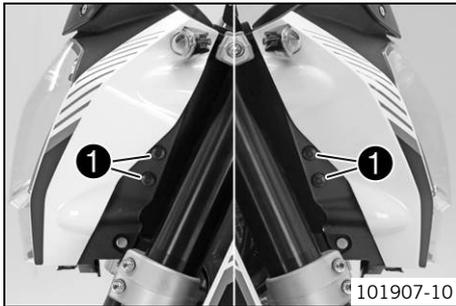


Main work

- Remove expanding rivets ①.

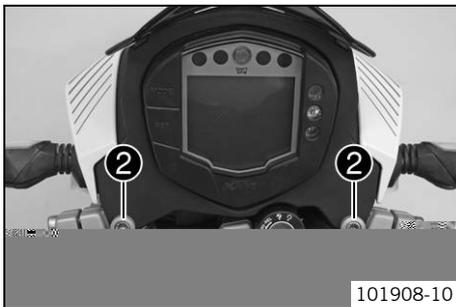

- Remove screws ②.
- Lift the headlight mask slightly and swing forward.

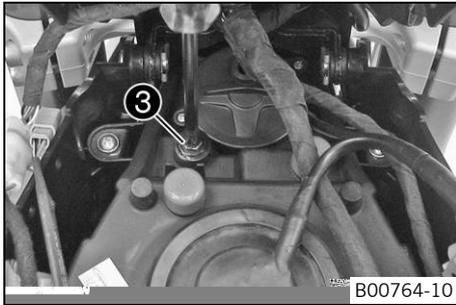


- Adjust the beam distance of the headlight by turning screw ③.

Guideline

For a motorcycle with rider, and with luggage and a passenger if applicable, the light/dark boundary must be exactly on the lower mark (applied in: Checking headlight adjustment).

i Info


Turn clockwise to increase the headlight range; turn counterclockwise to reduce the headlight range.

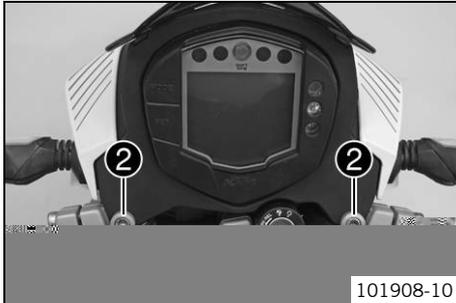

- Fold the headlight mask up.
- Mount and tighten screws ②.

Guideline

| | | | |
|-----------------------|----|----------------------|----------------------|
| Screw, headlight mask | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
|-----------------------|----|----------------------|----------------------|

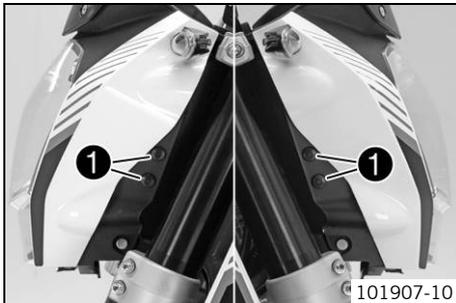


- Mount expanding rivets ① on both sides.

14 ELECTRICAL SYSTEM

Finishing work

- Check the headlight setting. (☛ p. 129)


15.1 Cooling system

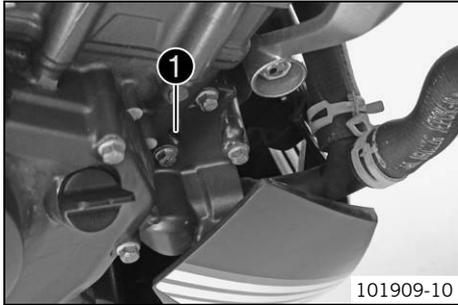

Water pump ① in the engine circulates the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ②. Heat expansion causes excess coolant to flow into compensating tank ③. When the temperature falls, this surplus coolant is sucked back into the cooling system. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

125 °C (257 °F)

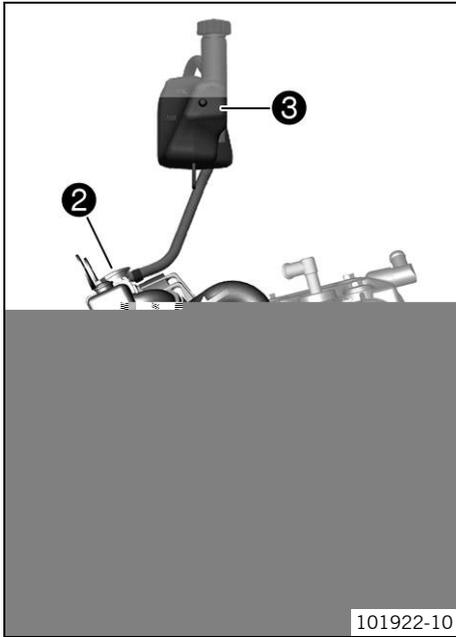

The coolant is cooled by the air stream and a radiator fan ④, which is controlled by a thermostat.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is poisonous and a health hazard.

- Coolant must not come into contact with the skin, eyes, or clothing. If contact occurs with the eyes, rinse with water immediately and contact a physician. Immediately clean contaminated areas on the skin with soap and water. If fuel is swallowed, contact a physician immediately. Change clothing that is contaminated with coolant. Keep coolant out of reach of children.

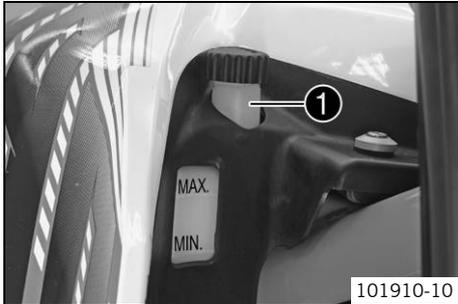

Condition

The motor is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove the cap of the compensating tank **1**.
- Check the antifreeze in the coolant.

-25... -45 °C (-13... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.


- Check the coolant level in the compensating tank.

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (👉 p. 171)

- Mount the cap of the compensating tank.

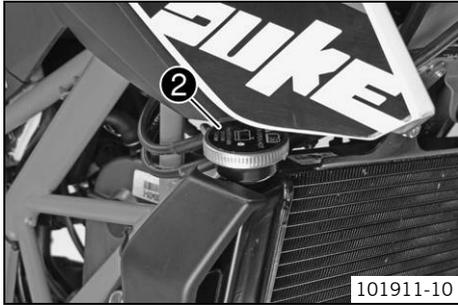

- Remove radiator cap ②.
- Check the antifreeze in the coolant.

-25... -45 °C (-13... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.

- Check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.

Coolant (☛ p. 171)

- » If you had to add more coolant than the specified amount:
 - > 0.20 l (> 0.21 qt.)
 - Fill/bleed the cooling system. ☛ (☛ p. 139)

- Mount the radiator cap.

15.3 Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is poisonous and a health hazard.

- Coolant must not come into contact with the skin, eyes, or clothing. If contact occurs with the eyes, rinse with water immediately and contact a physician. Immediately clean contaminated areas on the skin with soap and water. If fuel is swallowed, contact a physician immediately. Change clothing that is contaminated with coolant. Keep coolant out of reach of children.

Condition

The motor is cold.

- Stand the motorcycle upright on a horizontal surface.
- Check the coolant level in the compensating tank **1**.

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (☞ p. 171)



- Remove radiator cap **2** and check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.

Coolant (☞ p. 171)

- » If you had to add more coolant than the specified amount:
 - > 0.20 l (> 0.21 qt.)
 - Fill/bleed the cooling system. ☞ (☞ p. 139)

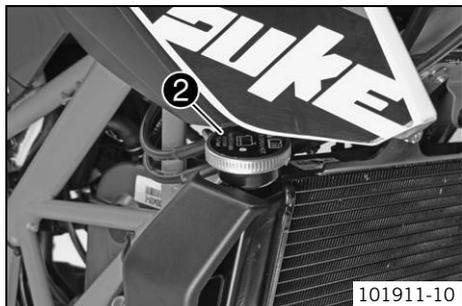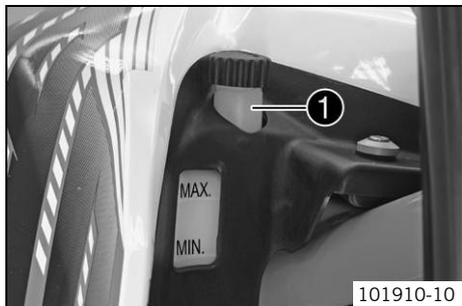

- Mount the radiator cap.

15.4 Draining the coolant 🐾



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.



Warning

Danger of poisoning Coolant is poisonous and a health hazard.

- Coolant must not come into contact with the skin, eyes, or clothing. If contact occurs with the eyes, rinse with water immediately and contact a physician. Immediately clean contaminated areas on the skin with soap and water. If fuel is swallowed, contact a physician immediately. Change clothing that is contaminated with coolant. Keep coolant out of reach of children.

Condition

The engine is cold.

Preparatory work


- Remove the front spoiler. (🐾 p. 91)

Main work

- Position the motorcycle upright.
- Place a suitable container under the engine.
- Remove screw ❶.
- Remove the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline

| | | |
|-----------------------------|----|-------------------|
| Plug, water pump drain hole | M6 | 8 Nm (5.9 lbf ft) |
|-----------------------------|----|-------------------|

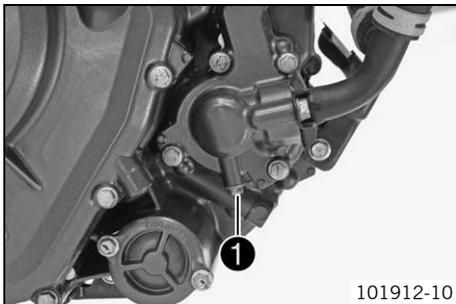

15.5 Filling/bleeding the cooling system ↘



Warning


Danger of poisoning Coolant is poisonous and a health hazard.

- Coolant must not come into contact with the skin, eyes, or clothing. If contact occurs with the eyes, rinse with water immediately and contact a physician. Immediately clean contaminated areas on the skin with soap and water. If fuel is swallowed, contact a physician immediately. Change clothing that is contaminated with coolant. Keep coolant out of reach of children.



Main work

- Remove radiator cap ①.

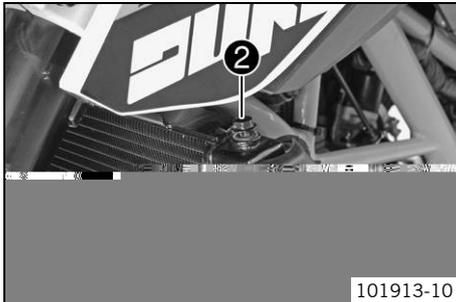

- Release bleeder screw ② by three turns.
- Tilt the vehicle slightly to the right.
- Pour in coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

Coolant (☛ p. 171)


- Fill the radiator completely with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

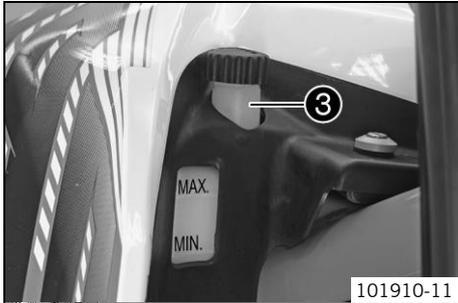


- Start the engine and let it run warm.
- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove the cap of the compensating tank **3** and top up the coolant level up to the **MAX** marking.
- Mount the cap of the compensating tank.

Finishing work

- Fit the front spoiler. (🔧 p. 92)

16.1 Checking the play in the throttle cable

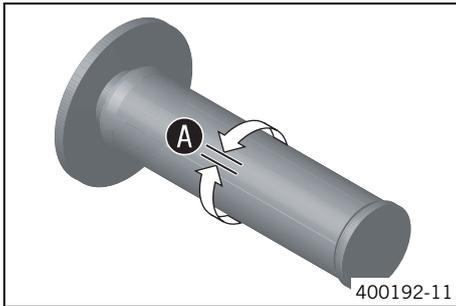

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Move the throttle grip back and forth to ascertain play **A** in the throttle cable.

| | |
|---------------------|----------------------------|
| Throttle cable play | 3... 5 mm (0.12... 0.2 in) |
|---------------------|----------------------------|

- » If the throttle cable play does not meet specifications:
 - Adjust the play in the throttle cable. ↘ (☛ p. 142)



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.
-
- Start the engine and let it run idle. Move the handlebar to and fro over the entire steering range.

| |
|---------------------------------|
| The idle speed must not change. |
|---------------------------------|

- » If the idle speed changes:
 - Check the throttle cable routing.

16.2 Adjusting the play in the throttle cable ↘




- Move the handlebar to the straight-ahead position.
- Push back sleeve ❶.
- Loosen lock nut ❷.
- Adjust the play in the throttle cable by turning adjusting screw ❸.

Guideline

| | |
|---------------------|----------------------------|
| Throttle cable play | 3... 5 mm (0.12... 0.2 in) |
|---------------------|----------------------------|

- Tighten lock nut ❷.
- Slide on sleeve ❶.

16.3 Checking the clutch lever play

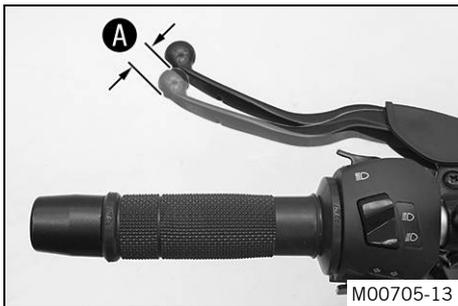

- Check the clutch lever for smooth operation.
- Move the handlebar to the straight-ahead position. Pull the clutch lever until resistance is perceptible, and determine the play in the clutch lever A.

| | |
|-------------------|-----------------------------|
| Clutch lever play | 1... 3 mm (0.04... 0.12 in) |
|-------------------|-----------------------------|

- » If the clutch lever play does not meet specifications:
 - Adjust the clutch cable play. ↘ (☞ p. 143)

Note

Clutch damage If there is no play on the clutch lever, the clutch will begin to slip.


- Before operating the motorcycle, always check the clutch lever play.

- Move the handlebar to and fro over the entire steering range.

| |
|--|
| The clutch lever play must not change. |
|--|

- » If the clutch lever play changes:
 - Check the routing of the clutch cable.

16.4 Adjusting the clutch cable play ↩

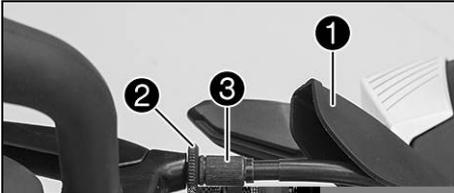

- Move the handlebar to the straight-ahead position.
- Push back sleeve ①.
- Loosen lock nut ②.
- Adjust the play in the clutch level **A** by turning adjusting screw ③.


Guideline

| | |
|-------------------|-----------------------------|
| Clutch lever play | 1... 3 mm (0.04... 0.12 in) |
|-------------------|-----------------------------|

- Tighten lock nut ②.
- Position bellows ①.

M00732-10

17.1 Checking the engine oil level

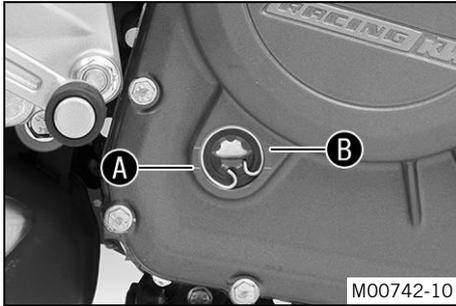

Condition

The engine is at operating temperature.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Check the engine oil level.



Info

After switching off the engine, wait one minute before checking the level.

The engine oil must be between the **A** and **B** markings .

- » When the engine oil level is below the **A** marking:
 - Add the engine oil. (☛ p. 147)
- » When the engine oil level is above the **B** marking:
 - Correct the engine oil level.

17.2 Changing the engine oil and oil filter, cleaning the oil screens 🛠️



Warning

Danger of scalding Engine oil and gear oil get very hot when the motorcycle is ridden.

- Wear appropriate protective clothing and safety gloves. In case of burns, rinse immediately with lukewarm water.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

Drain the engine oil only when the engine is warm.



101917-10

Preparatory work

- Remove the front spoiler. (☞ p. 91)
- Stand the motorcycle on its side stand on a horizontal surface.

Main work

- Place a suitable container under the engine.
- Remove oil drain plug ① with the O-ring.
- Remove oil screen ② with the O-ring.
- Remove screw plug ③ with oil screen ④.
- Completely drain the engine oil.
- Thoroughly clean the oil drain plugs and oil screens.
- Position oil screen ② and mount and tighten oil drain plug ① with the O-ring.

Guideline


| | | |
|----------------|---------|------------------------|
| Oil drain plug | M24x1.5 | 15 Nm (11.1 lbf ft) |
|----------------|---------|------------------------|

- Mount and tighten screw plug ③ with oil screen ④ and the O-ring.


Guideline

| | | |
|------------------------------|---------|--------------------|
| Oil screen screw plug, small | M17x1.5 | 12 Nm (8.9 lbf ft) |
|------------------------------|---------|--------------------|


17 SERVICE WORK ON THE ENGINE

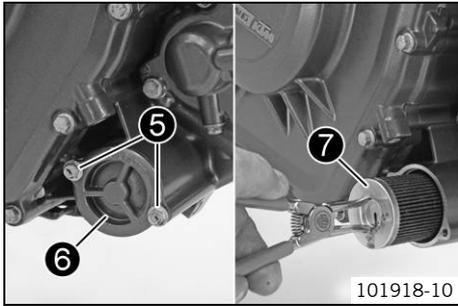

- Remove screws ⑤. Remove oil filter cover ⑥ with the O-ring.
- Pull oil filter ⑦ out of the oil filter housing.
Circlip pliers reverse (51012011000)
- Completely drain the engine oil.
- Thoroughly clean the parts and sealing surface.

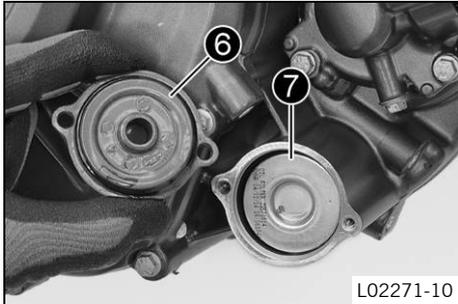

- Insert oil filter ⑦.
- Lubricate the O-ring of the oil filter cover. Mount oil filter cover ⑥.
- Mount and tighten the screws.

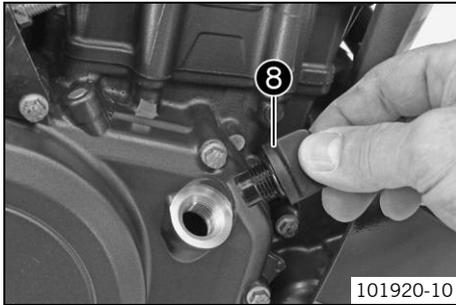

- Remove filler plug **8** and the O-ring from the clutch cover and fill up with engine oil.

| | | |
|------------|-----------------|------------------------------------|
| Engine oil | 1.7 l (1.8 qt.) | Engine oil (SAE 15W/50) (☛ p. 171) |
|------------|-----------------|------------------------------------|

- Install and tighten the oil filler plug with O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.
-
- Start the engine and check that it is oil-tight.

Finishing work


- Fit the front spoiler. (☛ p. 92)
- Check the engine oil level. (☛ p. 144)

17.3 Adding engine oil



Info

Too little engine oil or poor-quality engine oil results in premature wear to the engine.

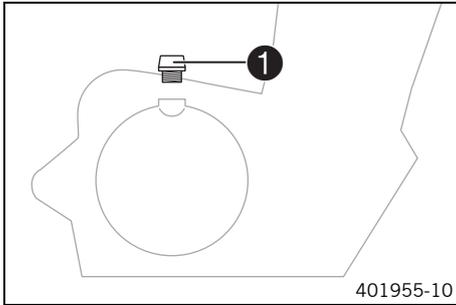

Main work

- Remove the oil filler plug **1** with the O-ring from the clutch cover and fill up with engine oil.

Engine oil (SAE 15W/50) (☞ p. 171)

i Info

In order to achieve optimal engine performance, it is not advisable to mix different engine oils.

We recommended changing the engine oil when necessary.

- Install and tighten the oil filler plug with the O-ring.

! Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.
- Start the engine and check that it is oil-tight.

Finishing work

- Check the engine oil level. (☞ p. 144)

18.1 Cleaning the motorcycle

Note

Material damage Damage and destruction of components by high-pressure cleaning equipment.

- When cleaning the vehicle with a pressure cleaner, do not point the water jet directly onto electrical components, connectors, cables, bearings, etc. Maintain a minimum distance of 60 cm between the nozzle of the pressure cleaner and the component. Excessive pressure can cause malfunctions or destroy these parts.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

If you clean the motorcycle regularly, its value and appearance will be maintained over a long period.
Avoid direct sunshine on the motorcycle during cleaning.

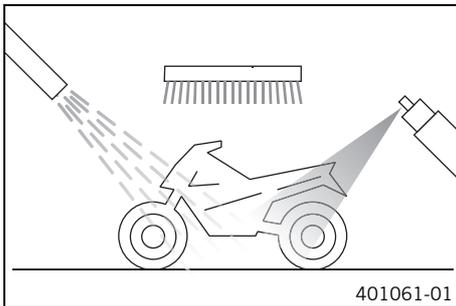

- Seal the exhaust system to keep water out.
- First remove coarse dirt particles with a gentle spray of water.
- Spray very dirty areas with a normal motorcycle cleaner and then clean with a paint-brush.

Motorcycle cleaner (☛ p. 174)

**Info**

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.
If the vehicle was operated in road salt, clean it with cold water. Warm water would enhance the corrosive effects of salt.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
 - Remove the closure of the exhaust system.
-

**Warning**

Danger of accidents Reduced braking efficiency due to a wet or dirty brake system.

- Clean or dry a dirty or wet brake system by riding and braking gently.
-
- After cleaning, ride the vehicle a short distance until the engine warms up.
-

**Info**

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- Push back the sleeves of the handlebar controls to allow any water that has penetrated to evaporate.
 - After the motorcycle has cooled off, lubricate all moving parts and bearings.
 - Clean the chain. (☛ p. 83)
 - Treat bare metal parts (except for brake discs and exhaust system) with anti-corrosion materials.
-

Preserving materials for paints, metal and rubber (☛ p. 175)

- Treat all painted parts with a mild paint polish.

Perfect Finish and high gloss polish for paints (☛ p. 175)

i Info

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (☛ p. 175)

- Oil the ignition/steering lock.

Universal oil spray (☛ p. 175)

18.2 Checks and maintenance steps for winter operation

i Info

If the motorcycle is used in the winter, salt can be expected on the roads. Precautions need to be taken against road salt corrosion. If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

- Clean the motorcycle. (☛ p. 149)
- Clean the brakes.

i Info

After **EVERY** trip on salted roads, thoroughly wash the brake calipers and brake linings with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.

After riding on salted roads, thoroughly wash the motorcycle with cold water and dry it well.



401060-01

- Treat the engine, swingarm, and all other bright and zinc-plated parts (except for the brake discs) with a wax-based corrosion inhibitor.
-



Info


Corrosion inhibitor is not permitted to come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (🔧 p. 83)

19.1 Storage

i Info

If you want to garage the motorcycle for a longer period, take the following steps. Before storing the motorcycle, check all parts for function and wear. If service, repairs or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

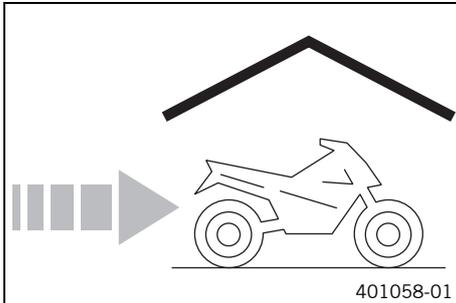

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

| |
|--------------------------|
| Fuel additive (☞ p. 174) |
|--------------------------|

- Refuel. (☞ p. 70)
- Clean the motorcycle. (☞ p. 149)
- Change the engine oil and oil filter and clean the oil screens. 🛠️ (☞ p. 144)
- Check the antifreeze and coolant level. (☞ p. 134)
- Check the tire air pressure. (☞ p. 112)
- Remove the battery. 🛠️ (☞ p. 114)
- Recharge the battery. 🛠️ (☞ p. 116)

Guideline

| | |
|--|--------------------------|
| Storage temperature of battery without direct sunlight | 0... 35 °C (32... 95 °F) |
|--|--------------------------|

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

i Info

KTM recommends jacking up the motorcycle.

- Raise the motorcycle with the rear wheel stand. (☞ p. 77)

- Raise the motorcycle with the front wheel stand. (☞ p. 78)
- Cover the motorcycle with a tarp or similar cover that is permeable to air.




Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and exhaust system to rust.

19.2 Preparing for use after storage

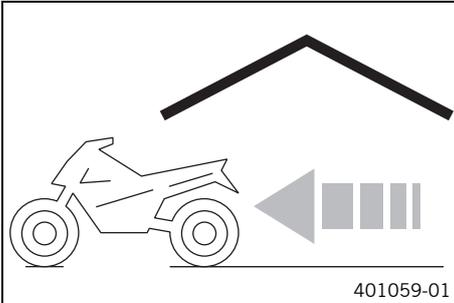

- Take the motorcycle off of the front wheel stand. (☞ p. 79)
- Take the motorcycle off of the rear wheel stand. (☞ p. 77)
- Install the battery. ☞ (☞ p. 115)
- Set the clock. (☞ p. 47)
- Perform checks and maintenance steps when preparing for use. (☞ p. 60)
- Take a test ride.

| Faults | Possible cause | Action |
|---|--|--|
| Engine does not crank when the electric starter button is pressed | Operating error | – Go through the steps of starting the engine. (☛ p. 61) |
| | Battery discharged | – Recharge the battery. 🛠 (☛ p. 116) |
| | Fuse 1 , 3 , 4 , or 8 is blown | – Change the fuses of individual power consumers. (☛ p. 120) |
| | No ground connection present | – Check the ground connection. |
| Engine turns only if the clutch lever is drawn | The vehicle is in gear | – Shift gear to neutral. |
| | The vehicle is in gear and the side stand is folded out | – Shift gear to neutral. |
| Engine turns but does not start | Operating error | – Go through the steps of starting the engine. (☛ p. 61) |
| | Fault in fuel injection system | – Read out the fault memory using the KTM diagnostics tool. 🛠 |
| Engine has too little power | Air filter is very dirty | – Change the air filter. |
| | Fuel filter is very dirty | – Check the fuel pressure. 🛠 |
| | Fault in fuel injection system | – Read out the fault memory using the KTM diagnostics tool. 🛠 |
| Engine overheats | Too little coolant in cooling system | – Check the cooling system for leakage. – Check the coolant level. (☛ p. 136) |
| | Radiator fins very dirty | – Clean the radiator fins. |
| | Foam formation in cooling system | – Drain the coolant. 🛠 (☛ p. 138) – Fill/bleed the cooling system. 🛠 (☛ p. 139) |
| | Thermostat defective | – Check the thermostat. 🛠 |
| | Fuse 5 blown | – Change the fuses of individual power consumers. (☛ p. 120) |

| Faults | Possible cause | Action |
|---|---|---|
| Engine overheats | Defect in radiator fan system | – Check the radiator fan system. 🛠️ |
| The engine diagnosis warning lamp (MIL) lights up red | Fault in fuel injection system | – Read out the fault memory using the KTM diagnostics tool. 🛠️ |
| Engine dies during the trip | Lack of fuel | – Refuel. (🔧 p. 70) |
| | Fuse 1 , 3 , 4 , or 8 is blown | – Change the fuses of individual power consumers. (🔧 p. 120) |
| The ABS warning lamp lights up | ABS fuse is blown | – Change the ABS fuses. (🔧 p. 119) |
| | Large difference in wheel speeds of the front and rear wheels | – Stop the vehicle, switch off the ignition, and start it again. |
| | Malfunction in ABS | – Read out the ABS fault memory using the KTM diagnostics tool. 🛠️ |
| High oil consumption | Engine vent hose bent | – Route the vent hose without bends or change it if necessary. |
| | Engine oil level too high | – Check the engine oil level. (🔧 p. 144) |
| | Engine oil too thin (low viscosity) | – Change the engine oil and oil filter and clean the oil screens. 🛠️ (🔧 p. 144) |
| Headlight and parking light are not functioning | Fuse 6 blown | – Change the fuses of individual power consumers. (🔧 p. 120) |
| Turn signal, brake light, and horn are not functional | Fuse 6 blown | – Change the fuses of individual power consumers. (🔧 p. 120) |
| Time is not (correctly) displayed | Fuse 8 blown | – Change the fuses of individual power consumers. (🔧 p. 120) |
| | | – Set the clock. (🔧 p. 47) |
| Battery discharged | Ignition was not switched off when vehicle was parked | – Recharge the battery. 🛠️ (🔧 p. 116) |

| Faults | Possible cause | Action |
|---|--|--|
| Battery discharged | Battery is not being charged by alternator | <ul style="list-style-type: none"> – Check the charging voltage. ↘ – Check the open-circuit current. ↘ |
| Combination instrument shows nothing on the display | Fuse 8 blown | <ul style="list-style-type: none"> – Change the fuses of individual power consumers. (☛ p. 120) – Set the clock. (☛ p. 47) |
| Speedometer in combination instrument not functioning | Speedometer wiring harness is damaged or plug-in connector is oxidized | <ul style="list-style-type: none"> – Check the wiring harness and plug-in connector. |

21.1 Engine

| | |
|--------------------------------|---|
| Design | 1-cylinder 4-stroke engine, water-cooled |
| Displacement | 375 cm ³ (22.88 cu in) |
| Stroke | 60 mm (2.36 in) |
| Bore | 89 mm (3.5 in) |
| Compression ratio | 12.9:1 |
| Control | DOHC, 4 valves controlled via cam lever, chain drive |
| Valve diameter, intake | 36 mm (1.42 in) |
| Valve diameter, exhaust | 29 mm (1.14 in) |
| Valve clearance, intake, cold | 0.08... 0.12 mm (0.0031... 0.0047 in) |
| Valve clearance, exhaust, cold | 0.13... 0.17 mm (0.0051... 0.0067 in) |
| Crankshaft bearing | 2 slide bearings |
| Conrod bearing | Sleeve bearing |
| Pistons | Forged light alloy |
| Piston rings | 1 compression ring, 1 tapered compression piston ring, 1 oil scraper ring |
| Engine lubrication | Pressure circulation lubrication with two rotary pumps |
| Primary transmission | 30:80 |
| Clutch | Clutch in oil bath/mechanically activated |
| Transmission | 6-gear, claw shifted |
| Transmission ratio | |
| 1st gear | 12:32 |
| 2nd gear | 14:26 |
| 3rd gear | 19:27 |

| | |
|--------------------------|---|
| 4th gear | 21:24 |
| 5th gear | 23:22 |
| 6th gear | 25:21 |
| Mixture preparation | Electronically controlled fuel injection |
| Ignition | Contactless controlled fully electronic ignition with digital ignition adjustment |
| Alternator | 12 V, 225 W |
| Spark plug | BOSCH VR 5 NE |
| Spark plug electrode gap | 0.8 mm (0.031 in) |
| Spark plug | BOSCH VR 5 NEU |
| Spark plug electrode gap | 1 mm (0.04 in) |
| Cooling | Water cooling, permanent circulation of coolant by water pump |
| Idle speed | 1,550... 1,650 rpm |
| Starting aid | Electric starter |

21.2 Engine tightening torques

| | | | |
|--|----|--------------------|---------------|
| Oil nozzle | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, gear sensor | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, ignition pulse generator | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, oil filter cover | M5 | 8 Nm (5.9 lbf ft) | – |
| Screw, retaining bracket | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, retaining bracket, stator cable | M5 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Screw, stator | M5 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Cylinder head screw | M6 | 12 Nm (8.9 lbf ft) | – |

21 TECHNICAL DATA

| | | | |
|---|-------|--------------------|---------------|
| Nut, water pump impeller | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Oil nozzle | M6 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Plug, water pump drain hole | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, alternator cover | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, bearing retainer | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, camshaft bearing bridge | M6 | 11 Nm (8.1 lbf ft) | – |
| Screw, camshaft, decompression shaft | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, chain securing guide | M6 | 11 Nm (8.1 lbf ft) | Loctite® 243™ |
| Screw, clutch cover | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, clutch spring | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, engine case | M6x35 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, engine case | M6x75 | 12 Nm (8.9 lbf ft) | – |
| Screw, engine sprocket | M6 | 11 Nm (8.1 lbf ft) | – |
| Screw, engine vent plate | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, freewheel gear retaining bracket | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, lock washer, engine sprocket | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, locking lever | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, oil filter cover | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, oil pump | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, retaining bracket | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, retaining bracket, clutch cable pull | M6 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, retaining bracket, shaft seal ring, clutch cover | M6 | 11 Nm (8.1 lbf ft) | Loctite® 243™ |
| Screw, shift drum locating | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |

21 TECHNICAL DATA

| | | | |
|--|-----------|--|---------------------------------------|
| Screw, starter motor | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, timing chain tensioner | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, timing chain tensioning rail | M6 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, unlocking of timing chain tensioner | M6 | 6 Nm (4.4 lbf ft) | – |
| Screw, valve cover | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, water pump cover | M6 | 12 Nm (8.9 lbf ft) | – |
| Nut, exhaust flange | M8 | 22 Nm (16.2 lbf ft) | – |
| Nut, manifold on cylinder head | M8 | 20 Nm (14.8 lbf ft) | – |
| Screw plug | M8 | 12 Nm (8.9 lbf ft) | Loctite® 243™ |
| Screw, balancer shaft gear | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, return spring, quick shifter | M8 | 20 Nm (14.8 lbf ft) | Loctite® 243™ |
| Stud, exhaust flange | M8 | 22 Nm (16.2 lbf ft) | – |
| Screw, conrod bearing | M8x1 | 34 Nm (25.1 lbf ft) | – |
| Oil pressure sensor | M10 | 14 Nm (10.3 lbf ft) | – |
| Rotor screw | M10 | 110 Nm (81.1 lbf ft) | Loctite® 243™ |
| Screw, camshaft drive sprocket | M10 | 32 Nm (23.6 lbf ft) | Loctite® 243™ |
| Screw, cylinder head | M10 | 1st stage 30 Nm (22.1 lbf ft) 2nd stage 60 Nm (44.3 lbf ft) | Thread is oiled, head flat is greased |
| Water temperature sensor | M10 | 14 Nm (10.3 lbf ft) | – |
| Screw plug, cam lever axis | M10x1 | 9 Nm (6.6 lbf ft) | – |
| Spark plug | M12 | 15 Nm (11.1 lbf ft) | – |
| Nut, inner clutch hub | M16LHx1.5 | 120 Nm (88.5 lbf ft) | Loctite® 243™ |

| | | | |
|---|---------|----------------------|---------------|
| Nut, primary gear/timing chain sprocket | M16x1.5 | 120 Nm (88.5 lbf ft) | Loctite® 243™ |
| Oil screen screw plug, small | M17x1.5 | 12 Nm (8.9 lbf ft) | – |
| Screw plug, alternator cover | M18x1.5 | 10 Nm (7.4 lbf ft) | – |
| Oil drain plug | M24x1.5 | 15 Nm (11.1 lbf ft) | – |
| Screw plug, alternator cover | M24x1.5 | 10 Nm (7.4 lbf ft) | – |
| Nut, balancer shaft gear | M28x1.5 | 60 Nm (44.3 lbf ft) | Loctite® 243™ |

21.3 Capacities

21.3.1 Engine oil

| | | |
|------------|-----------------|------------------------------------|
| Engine oil | 1.7 l (1.8 qt.) | Engine oil (SAE 15W/50) (☛ p. 171) |
|------------|-----------------|------------------------------------|

21.3.2 Coolant

| | | |
|---------|-----------------|--------------------|
| Coolant | 1.2 l (1.3 qt.) | Coolant (☛ p. 171) |
|---------|-----------------|--------------------|

21.3.3 Fuel

| | | |
|-----------------------------------|-------------------|--|
| Total fuel tank capacity, approx. | 11 l (2.9 US gal) | Super unleaded (ROZ 95/RON 95/PON 91) (☛ p. 172) (390 Duke 2017 CO) |
| | | Super unleaded, type C (ROZ 95/RON 95/PON 91) (☛ p. 173) (390 Duke 2017 BR) |
| Fuel reserve, approx. | 1.5 l (1.6 qt.) | |

21.4 Chassis

| | |
|---|---|
| Frame | Lattice frame of steel tubes, powder-coated |
| Fork | WP Suspension |
| Shock absorber | WP Suspension |
| Brake system | |
| Front | Disc brake with four-pot brake caliper |
| Rear | Disc brake with single-piston brake caliper, floating |
| Suspension travel | |
| Front | 150 mm (5.91 in) |
| Rear | 150 mm (5.91 in) |
| Brake discs - diameter | |
| Front | 300 mm (11.81 in) |
| Rear | 230 mm (9.06 in) |
| Brake discs - wear limit | |
| Front | 3.6 mm (0.142 in) |
| Rear | 3.6 mm (0.142 in) |
| Tire air pressure, solo | |
| Front | 2.0 bar (29 psi) |
| Rear | 2.0 bar (29 psi) |
| Tire air pressure with passenger/full payload | |
| Front | 2.0 bar (29 psi) |
| Rear | 2.2 bar (32 psi) |
| Secondary ratio | 15:45 |
| Chain | 5/8 x 1/4" (520) X-ring |

| | |
|-------------------------------------|-----------------------------|
| Steering head angle | 65° |
| Wheelbase | 1,367±15 mm (53.82±0.59 in) |
| Seat height, unloaded | 800 mm (31.5 in) |
| Ground clearance, unloaded | 170 mm (6.69 in) |
| Dry weight | 139 kg (306 lb.) |
| Maximum permissible front axle load | 125 kg (276 lb.) |
| Maximum permissible rear axle load | 210 kg (463 lb.) |
| Maximum permissible overall weight | 335 kg (739 lb.) |

21.5 Electrical system

| | | |
|---------------------------------------|----------------------|---|
| Battery | ETZ-9-BS | Battery voltage: 12 V Nominal capacity: 8 Ah Maintenance-free |
| Fuse | 75011088010 | 10 A |
| Fuse | 75011088015 | 15 A |
| Fuse | 90111088025 | 25 A |
| Fuse | 75011088030 | 30 A |
| Headlight | H4/socket P43t | 12 V 60/55 W |
| Parking light | W5W/socket W2.1x9.5d | 12 V 5 W |
| Instrument lights and indicator lamps | LED | |
| Turn signal | LED | |
| Brake/tail light | LED | |
| License plate lamp | LED | |

21.6 Tires

| | |
|--|--|
| Front tires | Rear tires |
| 110/70 ZR 17 M/C 54W TL Metzeler Sportec M5 Interact | 150/60 ZR 17 M/C 66W TL Metzeler Sportec M5 Interact |
| Additional information is available in the Service section under: http://www.ktm.com | |

21.7 Fork

| | | |
|------------------|------------------------|--|
| Fork part number | 90201000044 | |
| Fork | WP Suspension | |
| Fork length | 736 mm (28.98 in) | |
| Fork oil | 440 ml (14.88 fl. oz.) | Fork oil (SAE 4) (48601166S1) (☛ p. 172) |

21.8 Shock absorber

| | |
|-------------------------------|-------------------------------|
| Shock absorber article number | 90104010100 |
| Shock absorber | WP Suspension |
| Spring preload | |
| Comfort | 1 click |
| Standard | 3 clicks |
| Sport | 6 clicks |
| Full payload | 10 clicks |
| Static sag | 15 mm (0.59 in) |
| Riding sag | 50... 55 mm (1.97... 2.17 in) |

| | |
|---------------|-------------------|
| Fitted length | 300 mm (11.81 in) |
|---------------|-------------------|

21.9 Chassis tightening torques

| | | | |
|---------------------------------|------------------------|---------------------|----------------------|
| Exhaust clamp | - | 20 Nm (14.8 lbf ft) | - |
| Screw, chain guard | EJOT PT® K60x20 | 4 Nm (3 lbf ft) | - |
| Screw, headlight | EJOT PT® K50x12 | 4 Nm (3 lbf ft) | - |
| Screw, helmet holder | EJOT PT® K50x12 | 4 Nm (3 lbf ft) | - |
| Remaining screws, chassis | M4 | 4 Nm (3 lbf ft) | - |
| Screw, EFI control unit | M4 | 4 Nm (3 lbf ft) | - |
| Screw, license plate lamp | M4 | 2 Nm (1.5 lbf ft) | - |
| Screw, trim, subframe, bottom | M4 | 5 Nm (3.7 lbf ft) | - |
| Remaining nuts, chassis | M5 | 5 Nm (3.7 lbf ft) | - |
| Remaining screws, chassis | M5 | 5 Nm (3.7 lbf ft) | - |
| Screw, ABS hose clamp | M5 | 5 Nm (3.7 lbf ft) | - |
| Screw, brake line holder, rear | M5 | 5 Nm (3.7 lbf ft) | Loctite® 243™ |
| Screw, chain guard | M5 | 4 Nm (3 lbf ft) | Loctite® 243™ |
| Screw, fuel pump | M5 | 5 Nm (3.7 lbf ft) | - |
| Screw, fuel tank closure flange | M5 | 5 Nm (3.7 lbf ft) | - |
| Screw, fuel tank cover | M5 | 4 Nm (3 lbf ft) | - |
| Screw, fuel tank trim | M5 | 5 Nm (3.7 lbf ft) | - |
| Screw, license plate holder | M5 | 5 Nm (3.7 lbf ft) | - |
| Screw, rollover sensor | M5 | 5 Nm (3.7 lbf ft) | Loctite® 243™ |
| Screw, side stand switch | M5 | 5 Nm (3.7 lbf ft) | Loctite® 243™ |
| Screw, spoiler | M5 | 5 Nm (3.7 lbf ft) | - |

21 TECHNICAL DATA

| | | | |
|--|----|---------------------|----------------------|
| Screw, subframe cover, bottom | M5 | 5 Nm (3.7 lbf ft) | – |
| Screw, tail end lower part | M5 | 5 Nm (3.7 lbf ft) | – |
| Screw, tail light | M5 | 5 Nm (3.7 lbf ft) | – |
| Screw, windshield | M5 | 3 Nm (2.2 lbf ft) | – |
| Nut, damping rubber frame | M6 | 7 Nm (5.2 lbf ft) | – |
| Nut, foot brake lever adjustment | M6 | 9 Nm (6.6 lbf ft) | – |
| Nut, radiator | M6 | 5 Nm (3.7 lbf ft) | – |
| Remaining nuts, chassis | M6 | 15 Nm (11.1 lbf ft) | – |
| Remaining screws, chassis | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, ABS module | M6 | 7 Nm (5.2 lbf ft) | – |
| Screw, air filter box | M6 | 6 Nm (4.4 lbf ft) | – |
| Screw, air filter box lid | M6 | 3 Nm (2.2 lbf ft) | – |
| Screw, brake fluid reservoir of rear brake | M6 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Screw, cable holder, side stand switch | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
| Screw, chain sliding guard | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, compensating tank | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, damping rubber, retaining bracket | M6 | 7 Nm (5.2 lbf ft) | – |
| Screw, foot brake cylinder | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
| Screw, front fender | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, front lower rear panel | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, front seat fixing | M6 | 6 Nm (4.4 lbf ft) | – |
| Screw, front spoiler | M6 | 7 Nm (5.2 lbf ft) | – |
| Screw, fuel tank | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, headlight holder | M6 | 9 Nm (6.6 lbf ft) | – |

21 TECHNICAL DATA

| | | | |
|---|----|---------------------|---------------|
| Screw, headlight mask | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
| Screw, ignition coil | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, license plate holder | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
| Screw, lower rear panel | M6 | 7 Nm (5.2 lbf ft) | – |
| Screw, magnetic holder on side stand | M6 | 5 Nm (3.7 lbf ft) | Loctite® 243™ |
| Screw, main silencer | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, radiator bracket | M6 | 6 Nm (4.4 lbf ft) | – |
| Screw, radiator holder | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, rear ABS sensor wheel | M6 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Screw, rear splash protector | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, retaining bracket, clutch cable pull | M6 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Screw, rollover sensor holder | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, seat | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, shift lever linkage | M6 | 9 Nm (6.6 lbf ft) | Loctite® 243™ |
| Screw, voltage regulator | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, voltage regulator holder | M6 | 9 Nm (6.6 lbf ft) | – |
| Screw, wheel speed sensor holder | M6 | 8 Nm (5.9 lbf ft) | – |
| Fitting, engine mounting bracket | M8 | 25 Nm (18.4 lbf ft) | – |
| Nut, rear sprocket | M8 | 27 Nm (19.9 lbf ft) | – |
| Remaining nuts, chassis | M8 | 30 Nm (22.1 lbf ft) | – |
| Remaining screws, chassis | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, bottom triple clamp | M8 | 15 Nm (11.1 lbf ft) | – |
| Screw, engine bearer on frame | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, foot brake lever | M8 | 16 Nm (11.8 lbf ft) | Loctite® 243™ |

21 TECHNICAL DATA

| | | | |
|---|------------|---------------------|----------------------|
| Screw, fork stub | M8 | 15 Nm (11.1 lbf ft) | – |
| Screw, front brake disc | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, front wheel spindle | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, handlebar clamp | M8 | 21 Nm (15.5 lbf ft) | Loctite® 243™ |
| Screw, handrail | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, horn | M8 | 21 Nm (15.5 lbf ft) | – |
| Screw, main silencer | M8 | 24 Nm (17.7 lbf ft) | – |
| Screw, passenger footrest bracket | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, rear brake disc | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, shift lever | M8 | 16 Nm (11.8 lbf ft) | Loctite® 243™ |
| Screw, top triple clamp | M8 | 11 Nm (8.1 lbf ft) | – |
| Screw, front brake caliper | M8x1 | 25 Nm (18.4 lbf ft) | Loctite® 204™ |
| Banjo bolt, brake line | M10 | 24 Nm (17.7 lbf ft) | – |
| Fitting side stand | M10 | 35 Nm (25.8 lbf ft) | Loctite® 243™ |
| Remaining nuts, chassis | M10 | 50 Nm (36.9 lbf ft) | – |
| Remaining screws, chassis | M10 | 45 Nm (33.2 lbf ft) | – |
| Screw, engine bearer on engine | M10 | 45 Nm (33.2 lbf ft) | – |
| Fitting, bottom shock absorber | M10x1.25 | 45 Nm (33.2 lbf ft) | – |
| Fitting, handlebar support | M10x1.25 | 21 Nm (15.5 lbf ft) | – |
| Nut, mirror, left | M10x1.25 | 16 Nm (11.8 lbf ft) | – |
| Nut, mirror, right | M10LHx1.25 | 16 Nm (11.8 lbf ft) | – |
| Nut, turn signal | M10x1.25 | 6 Nm (4.4 lbf ft) | – |
| Screw, front footrest bracket | M10x1.25 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
| Screw, front footrest bracket / engine bearer | M10x1.25 | 45 Nm (33.2 lbf ft) | – |

21 TECHNICAL DATA

| | | | |
|---------------------------------|----------|--|----------------------|
| Screw, side stand bracket | M10x1.25 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, top shock absorber | M10x1.25 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
| Stud, rear sprocket | M10x1.25 | 50 Nm (36.9 lbf ft) | – |
| Nut, rear wheel spindle | M14x1.5 | 90 Nm (66.4 lbf ft) | – |
| Nut, swingarm pivot | M14x1.5 | 100 Nm (73.8 lbf ft) | – |
| Screw, top steering head | M16x1.5 | 53 Nm (39.1 lbf ft) | Loctite® 243™ |
| Lambda sensor | M18x1.5 | 19 Nm (14 lbf ft) | – |
| Swingarm bearing adjusting ring | M22x1 | Tighten and ensure that there is no play | – |
| Nut, steering head | M30x1 | Step 1 55 Nm (40.6 lbf ft) 2nd stage (loosen, counter-clockwise) 2 turns Step 3 5 Nm (3.7 lbf ft) | – |

Brake fluid DOT 4 / DOT 5.1

Standard/classification

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

- **RESPONSE BRAKE FLUID SUPER DOT 4**

Motorex®

- **Brake Fluid DOT 5.1**

Coolant

Guideline

- Only use high quality coolant with corrosion inhibitor for aluminum motors (even in countries with high temperatures). Using inferior antifreeze can result in corrosion and foaming.

Mixture ratio

| | |
|--|--|
| Antifreeze protection: -25... -45 °C (-13... -49 °F) | anti-corrosion/antifreeze distilled water |
|--|--|

Recommended supplier

Motorex®

- **COOLANT M3.0**

Engine oil (SAE 15W/50)

Standard/classification

- JASO T903 MA (☛ p. 176)
- SAE (☛ p. 176) (SAE 15W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Partially synthetic engine oil

Recommended supplier

Motorex®

- Formula 4T

Fork oil (SAE 4) (48601166S1)

Standard/classification

- SAE (☛ p. 176) (SAE 4)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Super unleaded (ROZ 95/RON 95/PON 91)

Standard/classification

- DIN EN 228 (ROZ 95/RON 95/PON 91)

Guideline

- Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.
- Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.



Info

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

Super unleaded, type C (ROZ 95/RON 95/PON 91)

Standard/classification

- Resolução n° 6 da ANP (Agência Nacional do Petróleo) (ROZ 95/RON 95/PON 91)

Guideline

- Only use super unleaded fuel that matches or is equivalent to the following specifications.
- Super unleaded fuel with an ethanol content of 20 to 25 % is permissible.



Info

Do **not** use fuel made of methanol (e. g. M15, M85, M100).

Do **not** use fuel with less than 20 % ethanol (e. g. E10).

Do **not** use fuel with more than 25 % ethanol (e. g. E30, E85, E100).

Chain cleaner

Recommended supplier

Motorex®

- Chain Clean

Chain lube for road use

Guideline

Recommended supplier

Motorex®

- Chainlube Road

Fuel additive

Recommended supplier

Motorex®

- Fuel Stabilizer

Long-life grease

Recommended supplier

Motorex®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier

Motorex®

- Moto Clean

Perfect Finish and high gloss polish for paints

Recommended supplier

Motorex®

- Moto Polish & Shine

Preserving materials for paints, metal and rubber

Recommended supplier

Motorex®

- Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier

Motorex®

- Quick Cleaner

Universal oil spray

Recommended supplier

Motorex®

- Joker 440 Synthetic

JASO T903 MA

Different technical development directions required a new specification for 4-stroke motorcycles – the JASO T903 MA Standard. Earlier, engine oils from the automobile industry were used for 4-stroke motorcycles because there was no separate motorcycle specification. Whereas long service intervals are demanded for automobile engines, high performance at high engine speeds are in the foreground for motorcycle engines. In most motorcycles, the gearbox and the clutch are lubricated with the same oil as the engine. The JASO MA Standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

INDEX

177

A

| | |
|-----------------------|-----|
| ABS | 93 |
| Accessories | 14 |
| Antifreeze | |
| checking | 134 |
| Antilock brake system | 93 |
| Auxiliary substances | 14 |

B

| | |
|-----------------------|-----|
| Baggage | 58 |
| Battery | |
| installing | 115 |
| recharging | 116 |
| removing | 114 |
| Brake discs | |
| checking | 94 |
| Brake fluid | |
| front brake, adding | 96 |
| rear brake, adding | 101 |
| Brake fluid level | |
| front brake, checking | 95 |
| rear brake, checking | 100 |
| Brake linings | |
| front brake, checking | 97 |
| rear brake, checking | 103 |
| Brakes | 66 |

| | |
|------------------|----|
| Brakes, applying | 66 |
|------------------|----|

C

| | |
|---|---------|
| Capacity | |
| coolant | 162 |
| engine oil | 162 |
| fuel | 71, 162 |
| Chain | |
| chain dirt accumulation, checking | 83 |
| checking | 87 |
| cleaning | 83 |
| Chain tension | |
| adjusting | 85 |
| checking | 84 |
| Chassis number | 20 |
| Clutch cable play | |
| adjusting | 143 |
| Clutch lever | 22 |
| Clutch lever play | |
| checking | 142 |
| Combination instrument | |
| activation and test | 29 |
| average fuel consumption 1/average fuel consumption 2 | |
| menu | 41 |
| average fuel consumption 2/service menu | 42 |
| average speed/average fuel consumption 1 menu | 40 |
| coolant temperature indicator | 38 |
| display | 35 |

INDEX

178

| | |
|--|------------|
| display TRIP F | 37 |
| distance menu 1 TRIP 1 | 46 |
| distance menu 2 TRIP 2 | 46 |
| filling level display in fuel tank | 36 |
| function buttons | 33 |
| indicator lamps | 34 |
| info display | 39 |
| range/riding time menu | 44 |
| riding time/average speed menu | 40 |
| service/range menu | 43 |
| total distance menu ODO | 45 |
| warning notes | 30 |
| Coolant | |
| draining | 138 |
| Coolant level | |
| checking | 134, 136 |
| Cooling system | 133 |
| filling/bleeding | 139 |
| Customer service | 15 |
| E | |
| Electric starter button | 26 |
| Emergency OFF switch | 25 |
| Engine | |
| running in | 57 |
| Engine number | 21 |
| Engine oil | |
| adding | 147 |
| changing | 144 |
| Engine oil level | |
| checking | 144 |
| Environment | 12 |
| F | |
| Figures | 15 |
| Filler cap | |
| closing | 51 |
| opening | 50 |
| Filling up | |
| fuel | 70 |
| Foot brake lever | 54 |
| free travel, adjusting | 99 |
| free travel, checking | 98 |
| Front spoiler | |
| installing | 92 |
| removing | 91 |
| Front wheel | |
| installing | 105 |
| removing | 104 |
| Fuse | |
| individual power consumers, changing | 120 |
| Fuses, ABS | |
| changing | 119 |
| G | |
| Grab handles | 52 |

INDEX

179

H

Hand brake lever 22

Headlight adjustment

adjusting 130

checking 129

Headlight bulb

changing 122

High beam flasher button 24

Horn button 23

I

Ignition lock 26

Implied warranty 14

Indicator lamps 34

K

Key number 21

Kilometers or miles

adjusting 47

L

Light switch 24

Loading the vehicle 58

M

Motor sprocket

checking 87

Motorcycle

cleaning 149

raising with the front wheel stand 78

raising with the rear wheel stand 77

taking off of the front wheel stand 79

taking off of the rear wheel stand 77

O

Oil filter

changing 144

Oil screens

cleaning 144

Operating substances 14

Owner's Manual 13

P

Parking 68

Parking light bulb

changing 125

Passenger footrests 53

Passenger seat

mounting 81

removing 80

Play in throttle cable

adjusting 142

checking 141

Preparing for use

advice on first use 56

after storage 154

checks and maintenance when preparing for use 60

INDEX

Protective clothing 12

R

Rear hub rubber dampers

checking 109

Rear sprocket

checking 87

Rear wheel

installing 108

Removing 107

Riding **63**

starting off 63

S

Safe operation 11

Seat

mounting 82

removing 81

Seat lock 51

Service 15

Service schedule 72-74

Shift lever **53**

adjusting 76

Shift speed RPM 1

adjusting 48

Shift speed RPM 2

adjusting 49

Shifting 63

Shock absorber

spring preload, adjusting 75

Side stand 55

Spare parts 14

Starting 61

Steering

locking 27

unlocking 27

Steering lock 26

Stopping 68

Storage 153

T

Technical data

capacities 162

chassis 163

chassis tightening torques 166

electrical system 164

engine 158

engine tightening torques 159

fork 165

shock absorber 165

tires 165

Throttle grip 23

Time

adjusting 47

| | |
|------------------------------|---------|
| Tire air pressure | |
| checking | 112 |
| Tire condition | |
| checking | 111 |
| Tool set | 52 |
| Transport | 69 |
| Troubleshooting | 155-157 |
| Turn signal switch | 25 |
| Type label | 20 |
| U | |
| Use definition | 9 |
| V | |
| View of vehicle | |
| front left | 16 |
| rear right | 18 |
| W | |
| Warranty | 14 |
| Winter operation | |
| checks and maintenance steps | 151 |
| Work rules | 12 |

READY TO RACE

[» www.ktm.com](http://www.ktm.com)



3213416en

11/2015

KTM Sportmotorcycle GmbH
3230 Mattighofen/Austria
<http://www.ktm.com>



Photo: Mitterbauer/KTM